

USER'S MANUAL

10.4" TFT CEILING COLOR MONITOR
(Roof Mounting Monitor)



Please read the manual carefully before using

Table of Content

- I. Before using the Product
 - 1. Important Safety Precautions

 - II. Explanations of Each part
 - 1. The Roof Mounting Monitor
 - 2. Control Box
 - 3. Remote control

 - III. Explanations of Function
 - 1. Mode
 - 2. AV1/AV2
 - 3. System function

 - IV. How to Connect
 - 1. Monitor and Control box
 - 2. External Terminal to Control box

 - V. IR Transmitter





 - VI. How to install

 - VII. Specification


 - VIII. MEMO

 - IX. Warranty
-

1. Important Safety Precautions


 WARNING	PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS MANUAL AND THOSE MARKED ON THE UNIT, FAILURE TO READ OR FOLLOW THE INSTRUCTION MAY RESULT IN SEVERE INJURY OF DEATH.
 WARNING	DO NOT DISASSEMBLE OR ALTER. ATTEMPTS TO DISASSEMBLE OR ALTER MAY LEAD TO AN ACCIDENT, FIRE AND / OR ELECTRIC SHOCK.
 WARNING	DO NOT OPERATE THE EQUIPEMENT WHILE DRIVING.
 CAUTION	DO NOT RAISE THE VOLUME EXCESSIVELY. KEEP THE VOLUME AT A CERTAIN LEVEL, WHERE YOU CAN STILL HEAR OUTSIDE NOISES WHILE DRIVING. UNABLE TO HEAR OUTSIDE WHILE DRIVING COULD CAUSE AN SERIOUS ACCIDENT.

1. The Roof Mounting Monitor

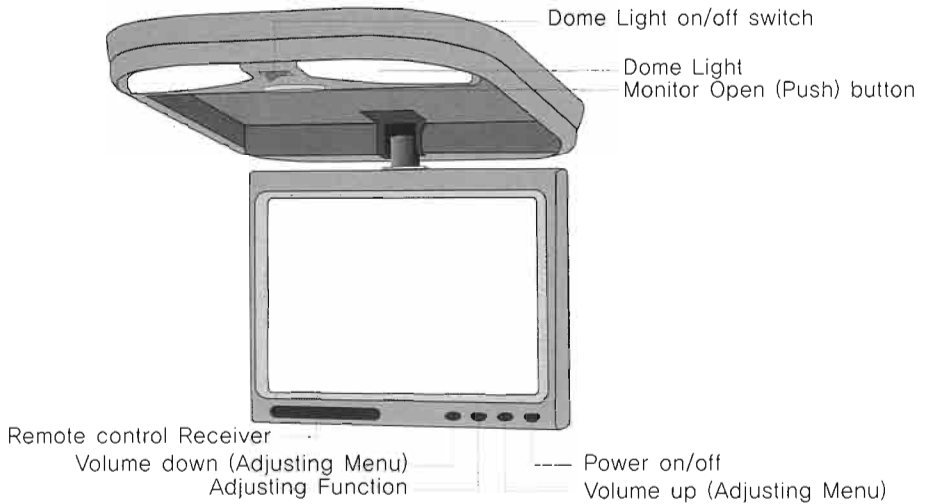


2. Control Box


1) The Back side

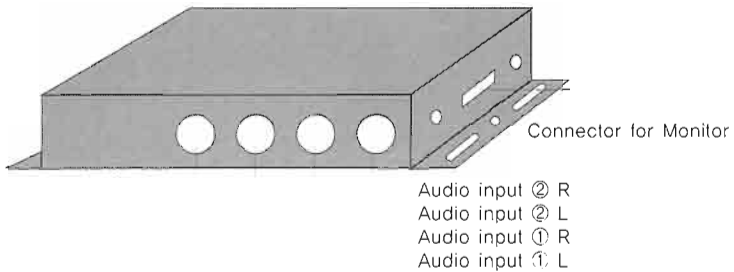


2) The Front side

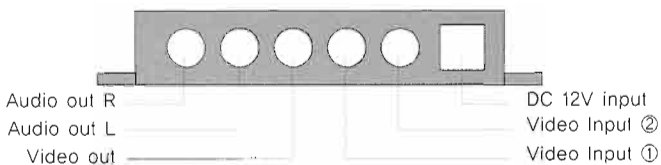

3. Remote control

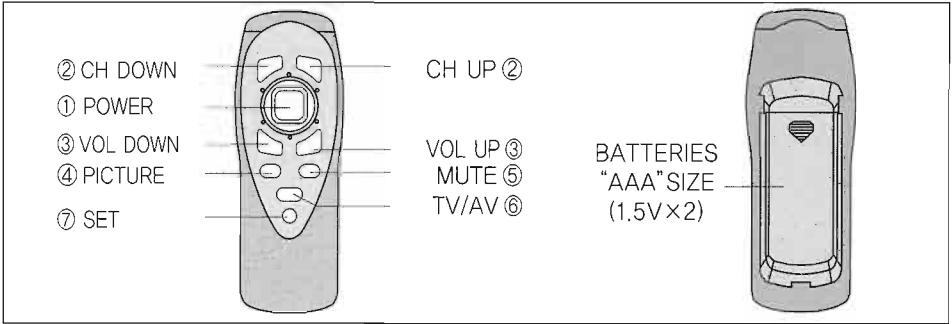

- 1) **POWER** : Power ON/OFF button
- 2) **CH UP/DOWN** : FM Transmitter frequency adjusting
- 3) **VOL UP/DOWN** : Menu adjusting
- 4) **PICTURE(MENU)** : Function adjusting
- 5) **MUTE** : Does not work in this model.
- 6) **TV/AV** : Changes Input source.
- 7) **SET** : Does not work in this model.

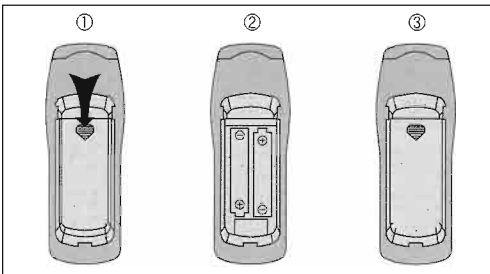


◆ REMOTE CONTROL BATTERIES INSTALL/REPLACE

1. Slide batteries compartment cover out from the back of remote control.
2. Insert two 1.5V(AAA) batteries shown on left picture.
3. Replace batteries compartment cover back in.


1. MODE(PIC)

- When pressing PIC button on the remote control (or Mode button on the Monitor), the following screen menu will appear in order as the pictures show bellow.

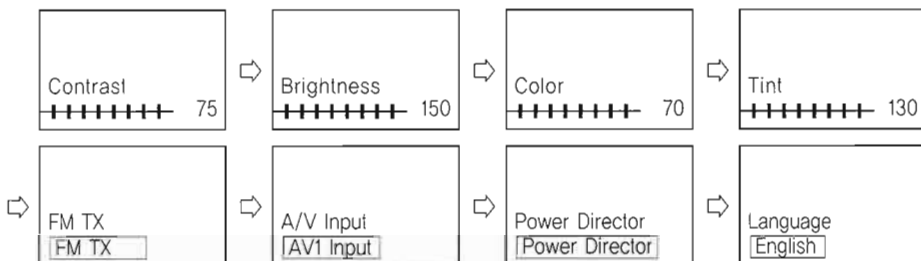

Adjust each function with VOL(+,-) button.

2. AV1/AV2

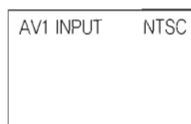

Change AV1/AV2 with AV button on the remote controller.

※ NOTICE

When you adjust a function with button on the Monitor without remote controller.


CASE1) When it is connected only one external terminal (1 A/V input) to control box. In this case, if no signal, the Mode button does not works. Please press VOL up/down button once and then press Mode button.

CASE2) If you have two A/V input source, In this case, it has no problem.


3. System Function

- This Monitor is NTSC/PAL auto switching.
- It will appear the System (NTSC/PAL) on the right of the top of screen automatically When the signal is inputed.


1. Monitor and Control Box

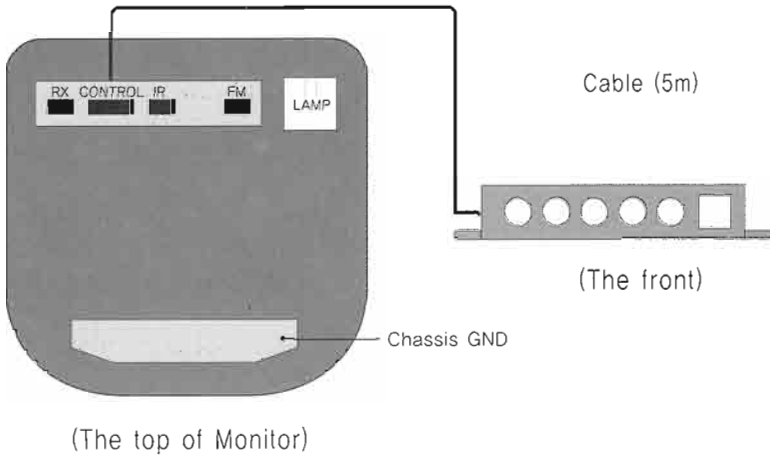

2. Control Box and External Terminal

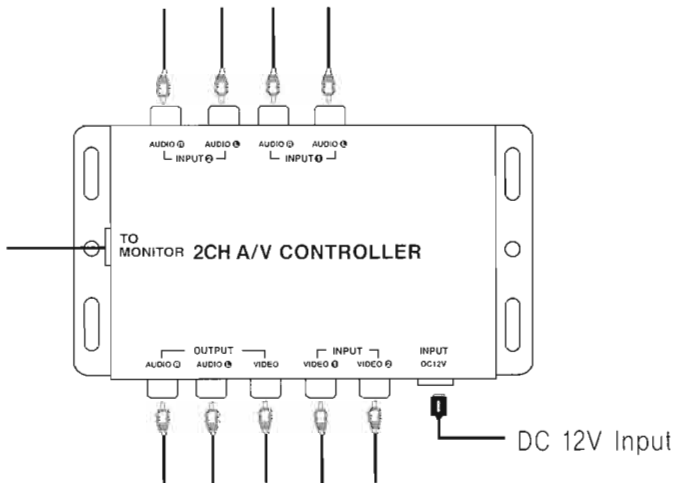


- This function is useful if the monitor has built-in IR transmitter.

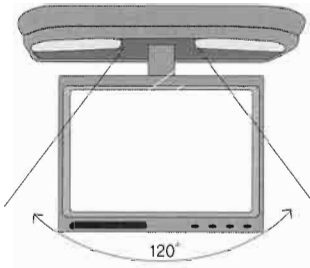

IR Wireless Headphone

(Front)

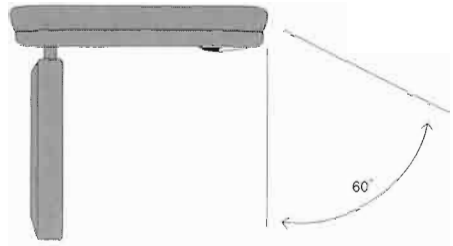

IR Wireless Headphone









(Side)

- FM TX

FM Transmitter
FM : 90.9 MHz
ON/OFF: ON

- When you want to use the FM transmitter set the on with VOL(+ or -) button on the remote control.
- Press CH(+ or -) button to select the frequency. Changable frequency is from 88.0 to 90.9MHz.

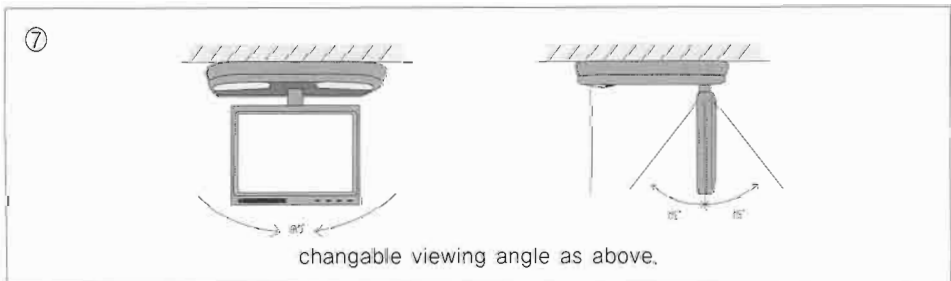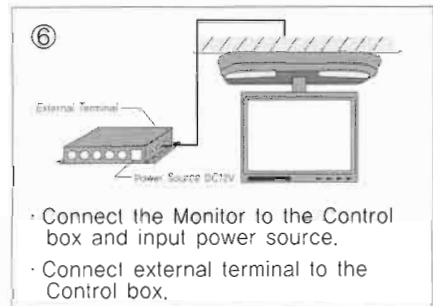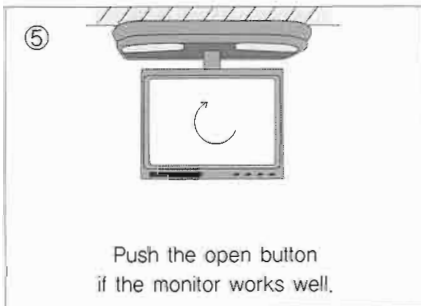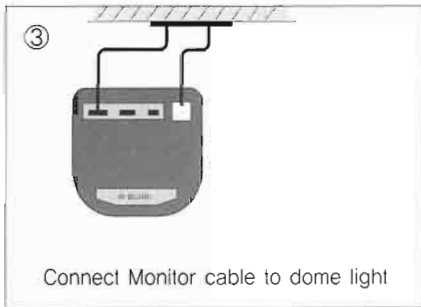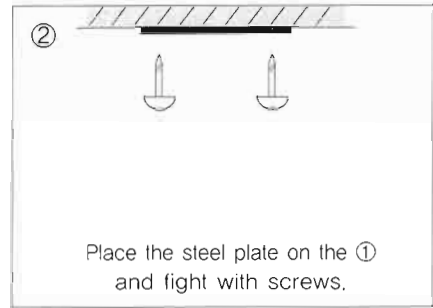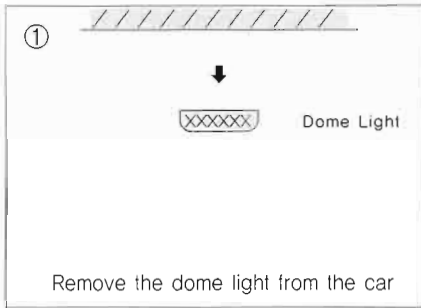

System	NTSC/PAL Auto Switching
Power Source	DC 12 V
Operate Temperature	-10°C~ +60°C
Storage Temperature	-20°C~ +80°C
LCD Panel	10.4 inch
Resolution	800×(R.G.B)×600
Angle of sight	Horizontal : ±45°, Vertical : Up 15° / Down 40°
Power Consumption	1) MONITOR : 9.6W
	2) LAMP : 6W
	3) A/V Controller : 2W
External Terminal (A/V Controller)	1) 2 Video / Audio (L/R) Input
	2) Video / Audio (L/R) Output