 


OWNER'S MANUAL


Overhead Combo 7" TFT-LCD Monitor / DVD / TV Tuner

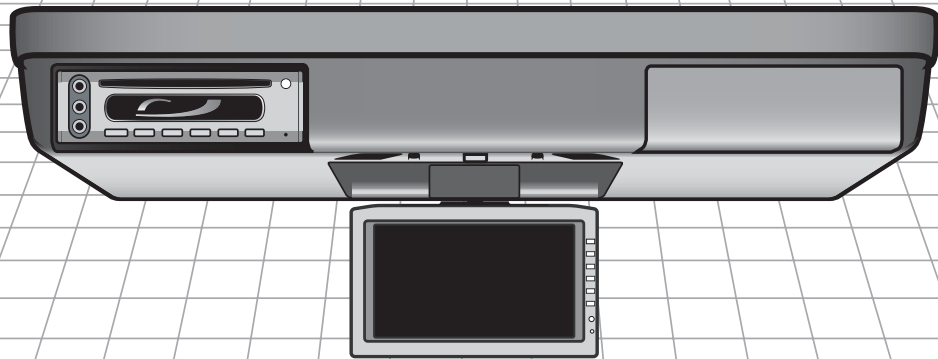



CAUTION

Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

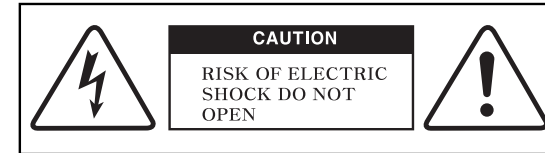SAFETY PRECAUTIONS	3	- NEXT	20
IMPORTANT SAFETY INSTRUCTIONS	4	- STEP	20
Features and Caution	5	- SHUFFLE.....	20
Installation	6	- Repeat A-B	20
Name of each parts	7	- PBC-OFF	20
- DVD	7	- REPEAT	21
- MONITOR	8	- ZOOM.....	21
- Remote Control	9	- GOTO.....	22
DVD Setup	10	How to Watch TV	23
SETUP Function	11	Picture control	24
- GENERAL SETUP	11	- Auto picture control	24
- SPEAKER SETUP	12	- Manual picture control	24
- AUDIO SETUP	12	- SCREEN mode control.....	25
- PREFERENCES	13~14	System choose function	26
- SMART NAVI	14	Listening to TV sound through FM Radio	27
DVD Mode	15	Reset picture control	27
- VOL+ VOL-.....	15	DISC	28
- PLAY/PAUSE	15	Trouble Shooting	29
- Mute	15	Specifications	30
- Menu	15		
- Arrows	15		
- POWER.....	16		
- Open / Close	16		
- Play or Selection	16		
- Stop	16		
- Display.....	17		
- Number buttons.....	17		
- TV Type	17		
- SUBTITLE	18		
- TITLE.....	18		
- SLOW	18		
- Fast reverse searching	19		
- Fast forward searching	19		
- PREV	19		



 The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude the constitute a risk of electric shock to person.

 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. Dangerous high voltages are present inside the enclosure. Do not open the cabinet.
- Not for use where video monitor is visible to driver to avoid risk of serious injury or possible violation of state laws.

CAUTION

- To prevent electric shock, match wide blade plug to wide slot, fully insert. The unit employs a laser system, to ensure the proper use of the unit, read this manual carefully and keep it for future reference. If the unit requires servicing, contact the seller of our service center - see "trouble shooting". To prevent direct exposure to the laser radiation, do not open the cabinet. Invisible laser radiation when the cabinet is opened or the interlocks are defeated. Do not stare into the laser beams. Use of any controls, adjustments, or procedures other than those specified herein may result in hazardous radiation exposure.

Read instructions

All the safety and operating instructions should be read before the product is operated.

Retain instructions

The safety and operating instructions should be retained for future reference.

Heed Warnings

All warnings on the product and in the operating instructions should be adhered to.

Follow instructions

All operating and use instructions should be followed.

Cleaning

unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning

Attachments

Do not use attachments not recommended by the product manufacturer as they cause hazards.

Water and moisture

Do not use this product near water.

Accessories

Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

Power sources

This product should be operated only from the type of power source indicated on the rear panel. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.

Grounding or Polarization

This product may be equipped with a polarized alternating-current line plug(a plug having one blade wider than the other).This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

Power


Cord Protection – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them.

Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer of have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

Heat

The product should be situated away from heat sources such as radiators, heat registers, stoves or other products(including amplifiers)that produce heat.

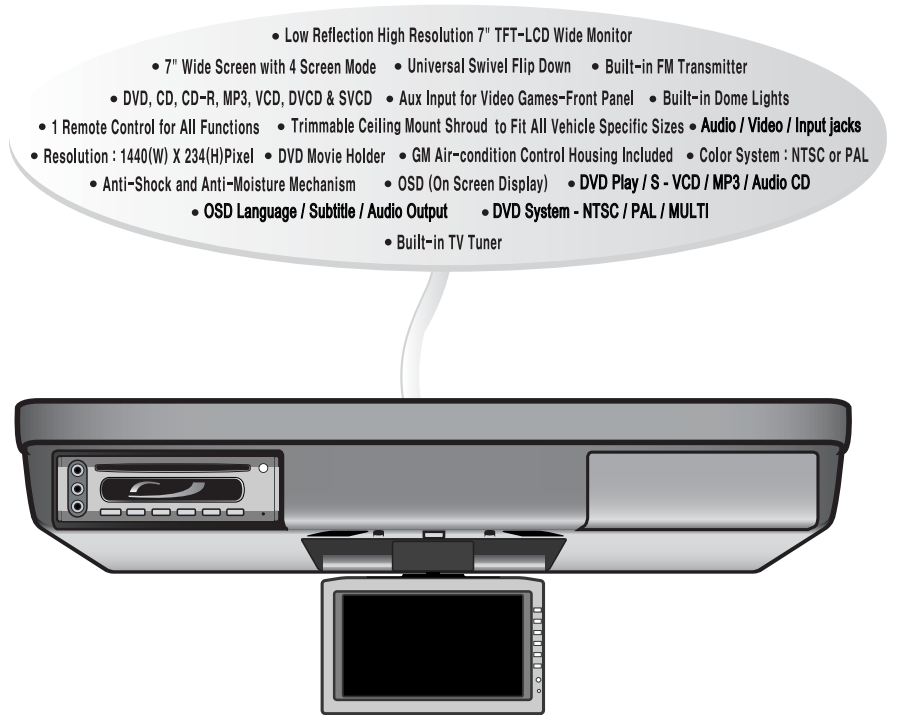


Preparations before operation

1. Do not open covers and repair yourself, refer servicing to qualified personnel.
2. DVD Players use an invisible laser beam, which can cause hazardous radiation exposure for a long time if directed.

- Please turn off the power of the DVD Player firstly before cut the car power off, if you want to see the next scene of the DVD title
(Of courses, you can see the next scene of the DVD title in case of turn on/off the DVD Player Properly)
- Do not cut the car power supply off while a disc is played, because it can cause damage in the DVD Player.
(Be sure to turn off the DVD Player, and then cut the car power supply off.)


Installation


Caution: Please refer servicing to qualified service person only to connect power with battery directly instead of connecting power by cigarette lighter socket of a car.

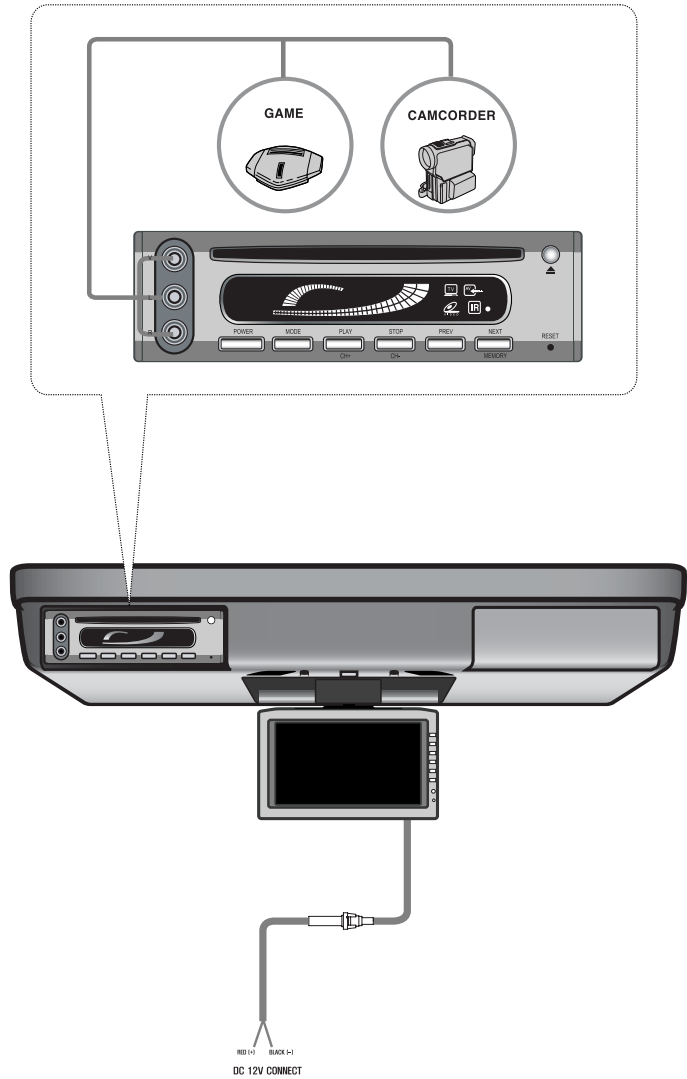


Names of each parts

DVD

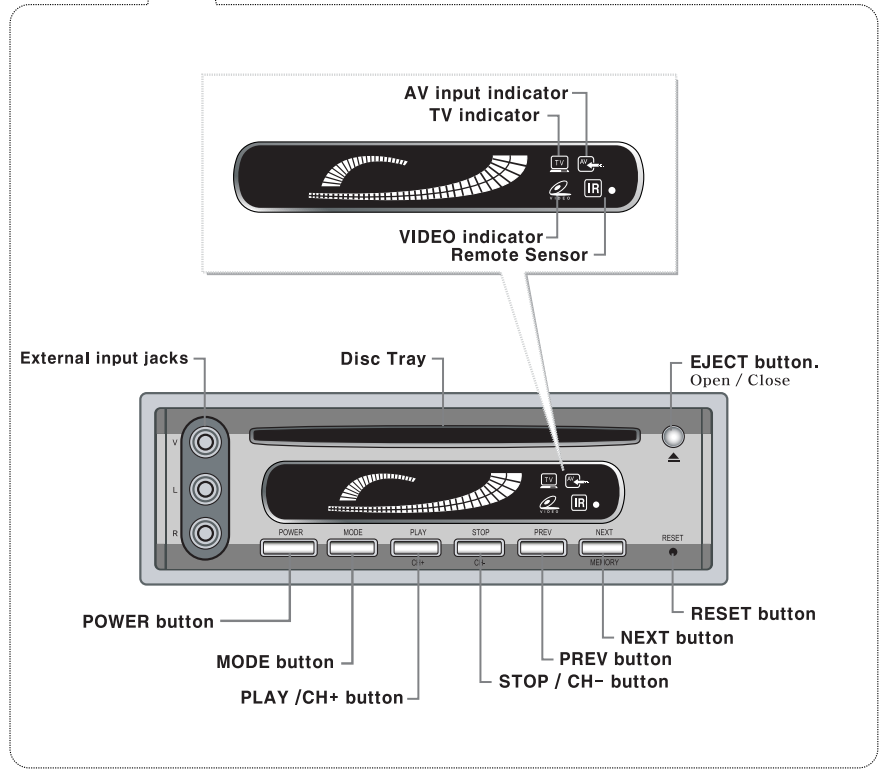

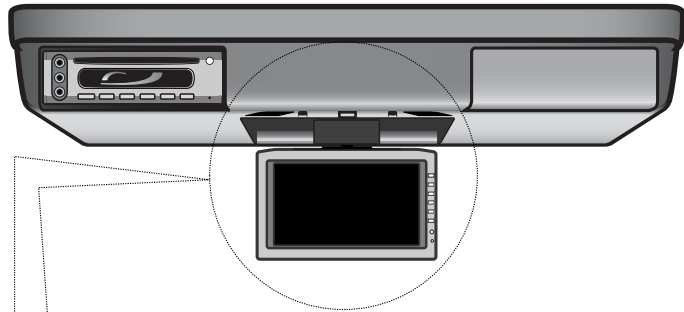

- 1. Lamp.**
Room light.
- 2. Lamp On/Off button.**
Press "On/Off" button to on the lamp, press "On/Off" button one more time to off the lamp.
- 3. PUSH button.**
- 4. IR Wireless headphone transmitter.**
As installed an audio signal into the device. The IR transmitter radiates infrared ray which was transformed from the audio signal on the wireless headphone. The user is possible to listen by the wireless headphone.
- 5. Monitor Power button.**
- 6. MENU button.**
Picture, Function Selection.
- 7. SEL UP / DOWN button.**
Selection in each mode.
- 8. ADJ UP / DOWN button.**
Adjustment in each mode.
- 9. Remote sensor.**
- 10. LED lamp.**

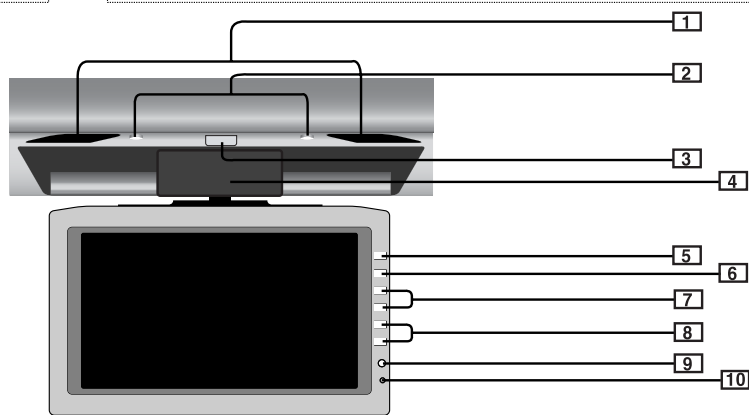

Remote Controller

EJECT button.(P16)
Opens / Closes the disc tray.

POWER button.(P16)
Turns on or off the DVD Player.

TITLE button.(P18)
Use to display the title menu of the loaded DVD disc.

ARROW button.(P15)
Use to move to the desired menu.

ENTER button.
Use to select the menu item.

DISPLAY button.(P17)
Shows information of elapsed or remaining time of a chapter or a title.

FR button.(P19)
Use to play reverse silently.

STOP button.(P16)
Stops disc play.

SLOW button.(P18)
Use to play slow silently.

FF button.(P19)
Use to play forward silently.

PREVIOUS button.(P19)
Use to move to the previous chapter of track.

PLAY/PAUSE button.(P15)
Begins / pauses disc play.

NEXT button.(P20)
Use to move to the next chapter or track.

POWER button.
Turns on the Monitor.

PICTURE button.(P24)
Use to adjust what you want color.

APC button.(P24)
Auto Picture control.

These functions are valid for only some products.

STEP button.(P20)
Plays one frame one time.

Button Lamp.

TV/AV/DVD button.(P23)
Changes each Play mode.

SET UP button.(P10)
Use to set various functions according to individual preference. (Auto Memory :If your DVD Player is TV mode)

MENU button.(P15)
Shows the menus of the disc under play.

MUTE button.(P15)
Use to cut on / off the sound.

GO TO button.(P22)
Use to search a title / a chapter of your DVD disc.

NUMERIC button.(P17)
Use when making a selection on menu screen.

SUB-T button.(P18)
Changes the subtitle language to another available.

ZOOM button.(P21)
Zoom in on picture.

SHUFFLE button.(P20)
Plays the disc in random order.

VOL+ button.(P15)
Increases the volume.

PBC-OFF button.(P20)
Shorts for playback control. (When you play a VCD2.0 disc, the root menu screen will be displayed on the monitor)

VOL- button.(P15)
Decreases the volume.


NTSC/PAL button.(P17)
Use to select a TV system mode.

REPEAT button.(P21)
Repeats part or all of a chapter, title, track, or an entire disc.

A-B button.(P20)
Repeats the selected segment.(Audio or Video)



An invalid button press.

When  appears on screen, it indicates an invalid button press.



DVD Setup

Caution : You can easily modify setup information on the setup menu. You should remove the disc from your DVD Player firstly and then press SETUP button.

■ When the SETUP button is pressed, Monitor screen shows the setup menu as shown below.

SETUP MENU -- MAIN PAGE

GENERAL SETUP

SPEAKER SETUP

AUDIO SETUP

PREFERENCES




EXIT SETUP

If the user press setup button, DVD Player will be paused and shows the setup menu to select according to individual preference.

GENERAL SETUP

TV DISPLAY

You can select a TV screen aspect ratio.

Function	Setup
 NORMAL / PS 4:3 PAN SCAN Choose this setting if you want the movie to fill the entire screen of your TV (This might mean that the left and right edges won't be seen)	NORMAL / PS
 NORMAL / LB 4:3 LETTERBOX Choose this setting if you want to see movies in their original aspect ratio. The movie might appear with black bars at top and bottom of the screen.	NORMAL / LB
 WIDE 16:9 WIDE SCREEN Choose this setting if your DVD Player is connected to a wide screen TV.	WIDE

(Caution : This option is available only when the disc has the function)

ANGLE MARK

Function	Setup
Select this function ON you can see the movie a number of different angles. (This feature does not work if a DVD has not been recorded with multiple camera angles.)	ON / OFF

OSD LANG

Function	Setup
Use this option to set the on-screen display language(OSD)	ENGLISH

CAPTIONS

Function	Setup
Use this option to set the display captions ON / OFF.	ON, OFF

SCR SAVER

Function	Setup
The screen saver is useful to prevent you display from becoming damaged. The screen saver picture appears when you leave the DVD player in stop mode for about two minutes.	ON, OFF

SPEAKER SETUP

DOWNMIX

Function

Use this function to choose setting to play with several audio channel.

Setup

LT / RT
STEREO

AUDIO SETUP

AUDIO OUT

Function

Use this option to set the type of the audio output jack of your TV or Audio system, and the SPDIF function will be operated if connect with AC3 Decode Amplifier

Setup

ANALOG
SPDIF / RAW
SPDIF / PCM

OP MODE

Function

Use to select the Line out / RF mode of the audio.

Setup

LINE OUT
RF REMOD

DUAL MONO

Function

Use to select audio mode.

Setup

STEREO / L-MONO /
R-MONO / MIX-MONO

DYNAMIC

Function

Please Use this function as initial setting position(OFF).

Setup

OFF TO FULL

PREFERENCES

TV TYPE

Function

Choose a proper setting according to the color system of the TV type MULTI SYSTEM, NTSC, PAL.

Setup

MULTI / NTSC / PAL

AUDIO

Function

Use this function to select the soundtrack language (This option is available only when the disc is recorded)

Setup

ENGLISH, FRENCH,
SPANISH, CHINESE,
JAPANESE

SUBTITLE

Function

Use to select the subtitle language on the screen.

Setup

ENGLISH, FRENCH, SPANISH,
CHINESE, JAPANESE, OFF

DISC MENU

Function

Use the disc menu option to select the menu language on the screen. (If the disc you are playing has that language available)

Setup

ENGLISH, FRENCH,
SPANISH, CHINESE
JAPANESE

PARENTAL

Function

The parental feature is a rating limit system, like movie ratings. It works with DVD discs that have been assigned a rating. This option lets you determine how your player will react to discs that contain movies that are rated (in the U.S.A.) You decide which ratings require a password and which ones don't. (The default password code is 0000)

Setup

1 G
2
3 PG
4 PG - 13
5
6 PG - R
7 NC - 17
8 ADULT
NO _ PARENTAL

PREFERENCES

PASSWORD

Function

Use this menu option to change the saved password to a new one. If you want to change the password, then press the factory set password 0000 and press you want No.

Setup

CHANGE

DEFAULTS

Function

Use this option to reset all options to the factory defaults.

Setup

RESET

SMART MAVI

Function

This SMART NAV feature shows the information about the MP3 disc under play.

Setup

User's setup.


VOL+ VOL-

VOL+ VOL-

To adjust audio output level of speaker from 0 to 16. (The volume cannot be adjusted in TV mode or AV mode)

PLAY/PAUSE


PLAY/PAUSE

Each press of the  button changes the play mode as side status.

→ Display
PAUSE
PLAY

MUTE

Mute

Each press of the  button changes the play mode as side status.

→ States
Mute
Mute Off

MENU (ADD/DEL)

Menu

DVD Menu

Audio  An invalid button press.

The Menu of the DVD disc is a little complicated. The contents of Menu on the screen is different depends on DVD title.



Arrows

Arrows

DVD Video setup

MP3 Button of the folder / track selection.

Use to move to the desired menu and use to select the menu by pressing select/play button.

Selected a folder / track will be played when press select/play button after press stop button.

POWER


POWER (Turns the power on/off)

This DVD player work from the last mode when turns this set on.

EJECT

Open / Close (Opens or closes the disc tray)

If DVD Player Working, you should press stop button firstly, and press Open button.

Each press of the  button changes the play mode as side status.

Display
OPEN
CLOSE

When you insert your DVD disc into DVD player, the DVD disc will be played after showing "DISC LOADING" on the screen. Most of DVD disc is played automatically.

PLAY/PAUSE

Play or Selection


Use this button to select a particular scene or plays disc. Most of disc have a function of auto play. And play antomatically.

STOP

STOP

DVD Stop disc Play


Press button  1 time Display Press play to continue

DVD player play previons scene when you press the  button.

The player will be stopped when you press this button again.


A/M Stop disc Play

AUDIO Press button  1 time Display Press play to continue

DVD player play previons scene when you press the  button.

The player will be stopped when you press this button again.


MP3

Press button  1 time Display STOP


DISPLAY

DISPLAY

DVD Title / Chapter

Each press of the button  on the remote controller changes the play mode as follows.


TITLE 00/00 CHAPTER 00/00
Current Title / Entire title
Current Chapter / Entire Chapter

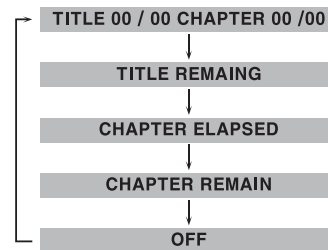

A/M Entire CD / state of track

AUDIO

Each press of the display button display the information of the current CD title on the screen as follows.

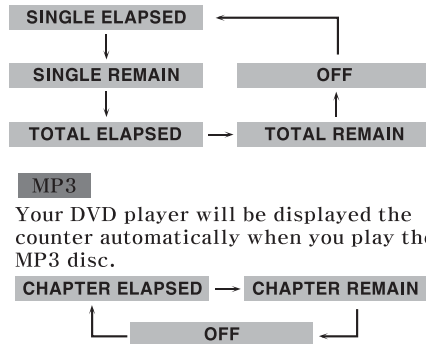

0 0 0 0

Number buttons

DVD Number buttons

0, 1, 2, ---9 number buttons are used to enter number, e.g. No. of track, DVD chapter No., time data, etc..

A/M Button of track selection

AUDIO


You can select a track by pressing Number button.

MP3 : Button of track selection

You can select a track in the foler by pressing Number button.

NTSC/PAL

TV Type

Each press of the button  on remote controller changes TV system as follows.



SUB-T
SUBTITLE

DVD SUBTITLE MENU

This item is to select the language for on-screen display messages that will be displayed on the TV screen (The title menu is different depends on your DVD disc)

A/M An invalid button press.



TITLE
TITLE

DVD TITLE MENU

Use to display the title menu of the loaded DVD disk.
(This Function is disc dependent)

A/M An invalid button press.



SLOW
SLOW

DVD SLOW

To play a disc slow forward or slow reverse. This allows you to search from forward 3 steps to reverse 3 steps.

A/M An invalid button press.



	Display
Each press of the button changes	SF 2X
→	SF 4X
→	SF 8X
the play mode as shown side states.	SR 2X
	SR 4X
	SR 8X
	PLAY

FR
Fast reverse searching

DVD Fast Reverse Searching

Each press of the button changes the play mode as shown side states.

Display

- FR 2X
- FR 4X
- FR 8X
- FR 16X
- FR 32X
- FR 64X
- PLAY

A/M Fast Reverse Searching

AUDIO

Each press of the button changes the play mode as shown side states.

Display

- FR 2X
- FR 4X
- FR 6X
- PLAY

MP3

You can't use this function when playing MP3.

FF
Fast forward searching

DVD Fast forward searching

Each press of the button changes the play mode as shown side states.

Display

- FF 2X
- FF 4X
- FF 8X
- FF 16X
- FF 32X
- FF 64X
- PLAY

A/M Fast forward searching

AUDIO

Each press of the button changes the play mode as shown side states.

Display

- FF 2X
- FF 4X
- FF 6X
- PLAY

MP3

Each press of the button changes the play mode as shown side states.

Display

- FF 2X
- FF 4X
- FF 6X
- PLAY

PREV
PREV

DVD PREV

Used to move to the previous chapter from the current chapter.

A/M PREV

AUDIO

Used to move to the beginning / previous track from the current track when you press this button one / two times.

MP3

Used to move to the previous track.

 **NEXT**

DVD NEXT

Used to move to the next chapter from the current chapter.

A/M NEXT

Used to move to the next track from the current track.

 **STEP**

DVD STEP

Use this button to play one frame at a time. To do normal speed press play button.

A/M  An invalid button press.



 **SHUFFLE**

DVD  An invalid button press.



A/M Random play

AUDIO

Use this button to play the loaded disc in a random order after press stop button.

MP3

You can listen to all the music in a random order.

SHUFFLE ON, RANDOM: Play in random mode.
FOLDER : Play in normal mode.

 **Repeat A-B**

To repeat the selected segment. It will be repeated the selected segment automatically until cancel. (Except MP3 disc)

 
 **PBC-OFF**

You can turn on or off the PBC function by pressing this button. When the PBC is loaded, PBC function is enabled automatically. This function is similar as selection of DVD title. (Except MP3 disc)


 **REPEAT**


DVD Repeats the chapter or the title.

Each press of the  button changes the play mode as follows.

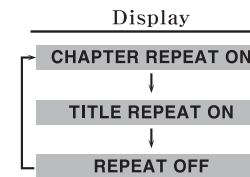


A/M Repeats the track or all the title on the disc.

AUDIO
Each press of the  button changes the play mode as follows.

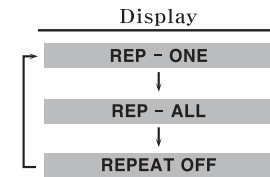


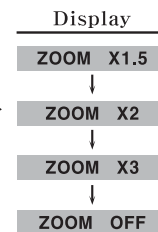
MP3 (Use to change the play mode)

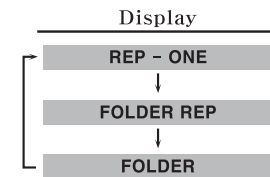

 **ZOOM**

DVD Enlarges screen images

Each press of the  button changes the play mode as shown side states.




A/M  An invalid button press.



GOTO

* This function is used to go to the track or chapter of the disc you want. TITLE/CHAPTER/PLAY TIME.

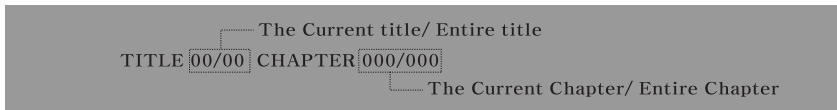

CHAPTER

Please press the button to go to the desired chapter. Please press the proper numeric button to go to the track or chapter you want and press the ENTER button and the Unit will be played in the desired order.

TITLE 00/00 CHAPTER 008/033

(When the No. of a track of chapter is over 9, firstly push [+10] then push relevant number buttons.)

PLAY TIME

Please press the button to go to the desired time. Please press the proper numeric button to go to the desired time you want and press the ENTER button and the Unit will be played in the desired order.

TITLE 01/10 TIME__ : __ : __
00:23:14

TITLE

Please press to button to go to the desired TITLE. Please select the TITLE you want using the adjust button . Please press the proper numeric button to go to the desired TITLE you want and press the ENTER button and the Unit will be played in the desired order.

TITLE 01/06 CHAPTER 008/033

TV/AV/DVD

Whenever you press TV/AV/DVD button, input condition is to be changed as follows.

```

    graph LR
      TV[TV] --> AV[AV]
      AV --> DVD[DVD]
      DVD --> TV
    
```

SETUP (A.MEMO)

For channel memory, channel can be auto-selected in a quick time by pressing A.MEMO button on a remote controller.

⚠ Channel may not be selected in a bad RF signal region.

Channel Selection

Select the channel you want by pressing channel or button in case channel is already selected(memorized).


MENU (ADD/DEL)

Use this function to delete or memorize a channel you want. Select what you want a channel by pressing number button and add or erase the channel by pressing ADD/DEL button.



Auto picture control

- Whenever you press APC button, the picture condition is to be changed as follows.

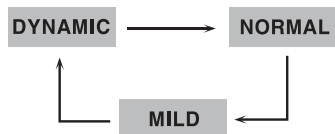


Manual picture control

CONTRAST / BRIGHT / COLOR / TINT selection.




- Make picture displayed by pressing PIC button.

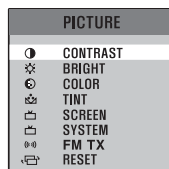

- Select you want the menu item by each pressing PIC button.



- Adjust the picture condition you want by pressing adjust button ► or ◀ button.

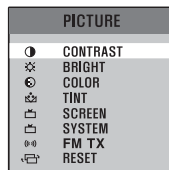


SCREEN mode control

Adjust screen mode as your taste.




- Make Picture menu displayed by pressing PIC button.

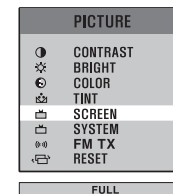

- Select the SCREEN item as cyan colored each pressing PIC button.



- Adjust the SCREEN mode you want by pressing adjust button ► or ◀ button.

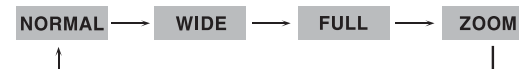

The screen will be displayed as follows in each mode.



The ratio of the left and right picture 4 to 3.



The picture will be magnified to the ratio of 4 to 3 on the left and right side each.



Magnify the picture in full screen



Magnify the left and right side of picture to the ratio of 4 to 3 and make the left and right side of picture displayed will.

SYSTEM function

1. Make picture displayed by pressing Pic button.

2. Select the SYSTEM item as cyan colored each pressing PIC button.

3. Press adjust button ▶ or ◀ and then choose NTSC or PAL mode.

PICTURE	
●	CONTRAST
✳	BRIGHT
◎	COLOR
⊞	TINT
▢	SCREEN
▢	SYSTEM
⊞	FM TX
↵	RESET

PICTURE	
●	CONTRAST
✳	BRIGHT
◎	COLOR
⊞	TINT
▢	SCREEN
▢	SYSTEM
⊞	FM TX
↵	RESET

PICTURE	
●	CONTRAST
✳	BRIGHT
◎	COLOR
⊞	TINT
▢	SCREEN
▢	SYSTEM
⊞	FM TX
↵	RESET

PICTURE	
●	CONTRAST
✳	BRIGHT
◎	COLOR
⊞	TINT
▢	SCREEN
▢	SYSTEM
⊞	FM TX
↵	RESET

NTSC ↔ PAL

Listening to TV sound through FM Radio

Unfold FM Radio antenna.

1. Select Radio frequency between FM 88.3MHz ~ 90.2MHz.

2. Make "Function" menu displayed by pressing PIC button.

3. Select the FM TX item as cyan colored each pressing PIC button.

4. Select to frequency shown in number 1 by pressing adjust button ▶ or ◀ button.

5. In "Off" condition, the sound only can be heard from TV set.

* It can not be heard any sound from FM Radio under Mute or volume 00 condition.

PICTURE	
●	CONTRAST
✳	BRIGHT
◎	COLOR
⊞	TINT
▢	SCREEN
▢	SYSTEM
⊞	FM TX
↵	RESET

PICTURE	
●	CONTRAST
✳	BRIGHT
◎	COLOR
⊞	TINT
▢	SCREEN
▢	SYSTEM
⊞	FM TX
↵	RESET

PICTURE	
●	CONTRAST
✳	BRIGHT
◎	COLOR
⊞	TINT
▢	SCREEN
▢	SYSTEM
⊞	FM TX
↵	RESET

PICTURE	
●	CONTRAST
✳	BRIGHT
◎	COLOR
⊞	TINT
▢	SCREEN
▢	SYSTEM
⊞	FM TX
↵	RESET

88.3MHz

Reset picture control

Reset picture control.

1. Make Picture displayed by pressing PIC button.

2. Select the RESET item as cyan colored each pressing PIC button.

3. Press adjust ▶ or ◀ and then replace with the factory default values.

PICTURE	
●	CONTRAST
✳	BRIGHT
◎	COLOR
⊞	TINT
▢	SCREEN
▢	SYSTEM
⊞	FM TX
↵	RESET



DISC

DVD features

It provides this multi-media disc player high-resolution image with high-quality sound and surround sound effect. The DVD player can play not only DVD discs of various versions, but also S-VCD, VDC, Audio-CD, and MP3. Each disc plays only saved-information and some function cannot use.

Discs that cannot be played

DVD-RW, DVD-REM, CD-ROM, CD-EXTRA discs cannot be played in this unit. And a CD, CD-RW, which was recorded on special software, could not be played also.

Region code

 
Your DVD player is designed and manufactured to region management information that is recorded on a DVD disc. The region number of this DVD Player is 3 and Plays free code also.

Copy protection

This product incorporates Copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by the Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by the Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by macrovision Corporation.

How to deal with disk

Don't touch the face carving information.
Don't stick label or glue-based note on disk (Don't use disks with remaining glue or damaged gluey label, it might result in damages to your DVD Player.
Don't put discs at straight under the sunshine. And park your car under the shade.

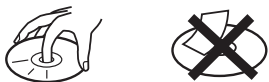

Caution.

Wipe softly with a wet cloth and then with a dry one.
Before playback, wipe the disc outwards from the center with clean cloth.
Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray.
Don't use scratched disc to avoid damaging your DVD Player.



TROUBLE SHOOTING

Q

Trouble

A

Action

No Power



Check the AC power cable was connected properly.

No Picture



Make sure that the equipment is connected properly. Check the connected TV or Monitor was turned on.

Stopped picture



Check the video cable was connected or TV/Monitor was turned on.

The playback picture is poor



Clean the disc.

No color



The Color system set by this unit does not match With that of TV/Monitor. Please check your System of the unit.

Distorted sound



Adjust the video system by pressing TV system button.(PAL, NTSC, MULTI)

The remote controller doesn't work properly



Remove the obstacles between the remote control unit and remote control sensor. Operate the remote controller in a short distance.

Displayed "DISK ERROR" on the screen



Set the power button to OFF and then back to ON alternatively, Turn off the power, disconnect the power plug and then reconnect it.

Caution

When a disk is brought from a cold environment to a hot one, there could be steam on the face of disk or water will appear the pickup lens. It will effect the play

1. Remove the disc from DVD player
2. Please turn on the power (unload the disc) to operate it for an hour, vaporize the condensation with the home-grown heat.
3. You can use your DVD Player without any problems.

DVD Specifications

Video System		MULTI / NTSC / PAL
Inputs		Video/Audio(L,R) : 1EA
Output / Load	Video	1Vpp / 75Ω
	Audio	500mV rms / 10KΩ
Power		DC 12V
Channel		VHF : 2~13, UHF : 14~69
Antenna		External Antenna (Impedance 75ohm)
Broadcast Mode		NTSC
Current Consumption		MAX 24W
Operating Temperature		0~40°C
Screen Format		16:9 Digital Wide
Resolution Pixel		1440 X 234
Brightness Factor		250 cd/m²
IR Transmitter		Yes
Dome Light		Yes
Dimensions		(W)615 X (H)228 X (D)71.5mm

Note : This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

