

Support site

If you have any questions or for the latest support information on this product, please visit the web site below:

<http://www.soundstream.com>

If you have any questions/problems regarding this product, try the following:

- 1 Read Troubleshooting in these Operating Instructions.
- 2 Please contact (U.S.A. only);
URL <http://www.soundstream.com>

<http://www.soundstream.com>

©2017 Soundstream Corporation Printed in USA



SOUNDSTREAM

AV Center

Owner's Manual EN

Creative 2-Screen Headunit

2 DIN 6.95" with
7" TFT LCD Monitor
DVD/CD/MP3/MP4 Player
AM/FM Radio
Support Bluetooth
Support Navigation
Supportt USB PhoneLink

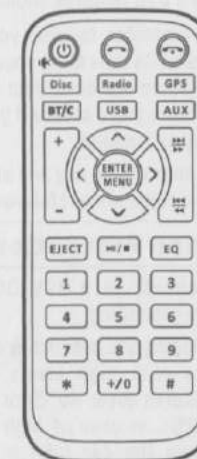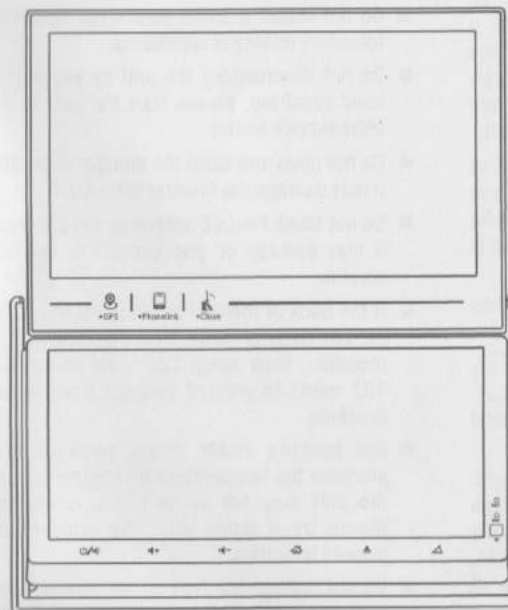

Bluetooth



300W 4CH



AUX
Input



VRN-DD7HB

WARNING!

To promote safety, certain functions are disabled unless the parking brake is on. The Unit is designed to detect parked status and must be connected to the power supply side of the parking brake switch. Improper connection or use of his connection may violate applicable law and may result in serious injury or damage. To avoid the risk of damage and injury and the potential violation of applicable laws, this unit is not for use with a video screen that is visible to the driver.

- To avoid the risk of accident and the potential violation of applicable laws, the front Video image feature should never be used while the vehicle is being driven. Also, other video displays should not be in a location where it is a visible distraction to the driver. In some countries or states the viewing of images on a display inside a vehicle even by persons other than the driver may be illegal. Where such regulations apply, they must be obeyed and this unit's DVD features should not be used.
- Please remember to wear your seat belt at all times while operating your vehicle. If you are ever in an accident, your injuries can be considerably more severe if your seat belt is not properly buckled.
- The supplier waves any and all liability when these warnings are not followed.

Operation Precautions









- Only connect to a 12V DC battery and negative grounding.
- Avoid placing the product in direct sunlight, in areas with high levels of dust, high temperatures (over 40°C) or high humidity (over 90%). In case of high temperatures, cool down the car interior by means of ventilation or air-conditioning.
- Operate in well ventilated areas.
- Do not turn on or off the product in short intervals. When turning the unit off, wait for at least 10 seconds prior to turning the unit on again. Do not operate the player with scratched, bended or broken discs and when a disc is not loaded properly, do not force it into the player.
- Do not watch video playback while driving which will cause serious danger and risks of traffic accident. It may violate the laws and regulations.(There may be exceptional case, i.e., using rear view camera and navigation system)
- Do not install the unit where the operation for safety driving is restrained.
- Do not disassembly the unit by yourself, if need repairing, please take the unit to the after service center.
- Do not open and close the monitor manually, it may damage the monitor tilt system.
- Do not touch the LCD screen by hard objects, it may damage or give scratch to the LCD screen.
- If the back of monitor touches dashboard or air-conditioner inlet etc after open the monitor , then setup TILT level in monitor TILT menu to prevent damage from repeat touching.
- Car parking under direct sunlight may increase the temperature inside the car and the unit may not be in proper operation, please try it again after the temperature returns to normal.
- Do not replace the fuse on the power cable without professional guidance, using improper fuse may cause damage to the unit or even cause burn the unit.
- Do not use irregular shaped Disk.
- IR remote control operation may be hindered by monitor when the monitor is opened, thus please use the remote control at the similar level of remote control receiver.
- Do not install the unit where the cooling fan is blocked.

Content

WARNING!	2
Operation Precautions	2
Contents	3
Accessories	4
Installation / Un-installation	5
Wiring Connections	5
Panel	7
Remote Control	8
Main Menu	9
•Radio Player	11
•USB Interface Operation	12
•Setting Control	13
Audio Setting	13
General Setting	13
Radio Setting	14
Display Setting	14
DVD Ratio Setting	14
Bluetooth Setting	14
System Information	14
•GPS Section	15
•Mobile Phone Link Section	22
•Bluetooth Section	22
•AV-IN Mode	24
•R-Camera Mode	24
•Other Functions	24
Notes On Disc	25
Troubleshooting	26
Troubleshooting	27
Technical Specifications	28
Bluetooth Connection Attention Instructions	29

Accessories

Package contains the following accessories for installation and operation of the unit.

(1) Washer, Spring Washer, M5 Nut	1 each	
(2) Mounting Strap	1	
(3) Bolt	1	
(4) Screw	4	
(5) Mounting Collar	1	
(6) Release Key	2	
(7) Screw	1	
(8) Rubber Cushion	1	



Remote Control



User Manual



Warranty card



GPS cable



Power cable



Trim ring



Micro SD card (Map)

Note: Product image may vary from the actual delivery.

Installation / Un-installation

Note

Before starting installation of the unit, make sure the wiring is connected properly. Use only the parts provided with the unit to ensure proper installation. The use of unauthorized parts may cause malfunction.


Install the unit where it does not get in the driver's way and will not injure the passenger in case there is a sudden stop, like an emergency stop.

INSTALLATION (Figure 1)

- Insert the unit into dash-board hole and fix it
- If necessary, place the mount strap at the rear of the unit and fix it with provided washer as figure 2.
- Push the unit into the Half Sleeve until you hear a click sound
- Place Trim Ring over the unit and installation is completed as figure 3. (Some vehicle may not need Trim Ring).

UN-INSTALLATION


- Insert the supplied extraction keys into the unit and pull the unit out with keeping the extraction keys. (as Figure. 4)

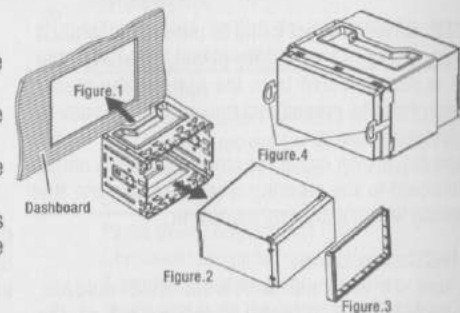

Mounting Strap

A mounting strap is often included with new stereos. For most installations, it is not necessary part of the installation process. However, it can be useful to help support the stereo in yr dash; it also helps reduce vibration. One end of mounting strap attaches (with a screw) to the rear of the stereo.

The other end attaches to an existing bolt or screw behind the dash. Just bend the shape as necessary to enable mounting.

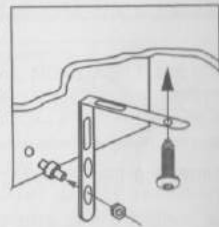

Wiring Connections


Make sure you have good chassis ground. A good ground connection will eliminate most electrical noise problems. A good chassis ground requires a tight connection to the vehicle's metal chassis. The area around the ground connection should be clean, bare metal without rust, paint, plastic, dust, or dirt for a good electrical connection.

Caution: Do not interchange the connection of the wiring!!!

For some car models you may need to modify wiring of the supplied power cord. Contact your authorized car dealer before installing this unit.

Using the power connector

Cut the connector; connect the colored leads of the power cord to the car battery as shown in the color code table below for speaker and power cable connections.

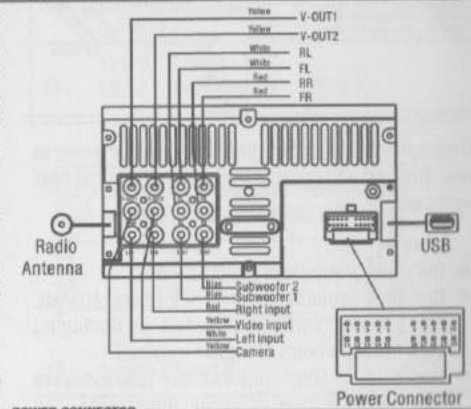

POWER CONNECTOR

1 FL-(White)	2 FL-(White/Black)	3 RL-(Green)	4 FR-(Green/Black)	5 ACC 12V-(Red)
6 RL-(Green)	7 SWC 2(White/Blue)	8 SWC 1(White)	9 Camera(Brown)	10 Parking Brake(Pink)
11 FR-(Green)	12 FR-(Grey/Black)	13 RR-(Purple)	14 RR-(Purple/Black)	15 Ground-(Black)

Wiring Connections

NOTE: Never connect cable to the system while it is connected to the battery power. Whenever the unit is disconnected from the battery, the preset memory will be erased and the unit will go back to its factory defaults.

When the brown cable for steering wheel control connected to the steering wheel, we can use the steering wheel to control some unit.

 
ASWC Connections

To use an external universal SWC module, connect only IR (Green) to the output of the module.


Note: To watch video the parking wire should be connected to brake signal. 2 cables are connected to a Hands-Free device (not included).

Parking wire

Note: The parking wire is connected with brake signal; for safety, the programs can be seen on the monitor after braking the car.



Connecting the reversing line to taillight on the car

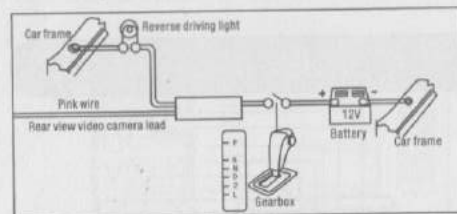

After connecting, when you start up the reverse gear, the unit will receive the picture from car rear view camera.

Note:


- Only use groundless loudspeakers.
- Use only loudspeakers of minimum 40Watt, using fewer watts may result in damaging your loudspeakers at higher volumes.
- Use 4~8 Ω (Ohm impedance) loudspeakers only; using higher or lesser impedance may damage the unit.
- Do not use 3-cable loudspeakers and do not connect the loudspeakers minus to the car

(GND). The unit is using a BTL circuit and each loudspeaker must be connected with insulated cables according the diagram.


- Loudspeaker cables and/or optional external power amplifiers must always be about 30cm away from the antenna and/or antenna extension parts.

Connect the speakers according the following diagram, incorrect connections will damage the unit or your loudspeakers

Speaker Connection

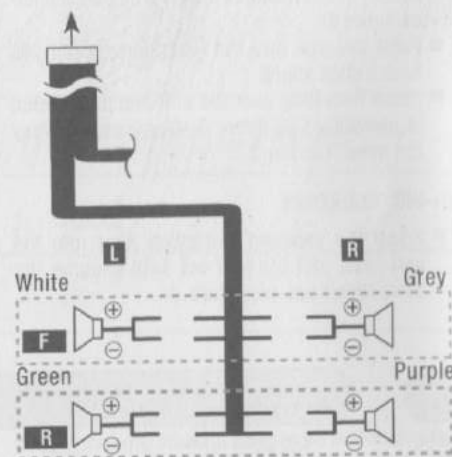

Panel

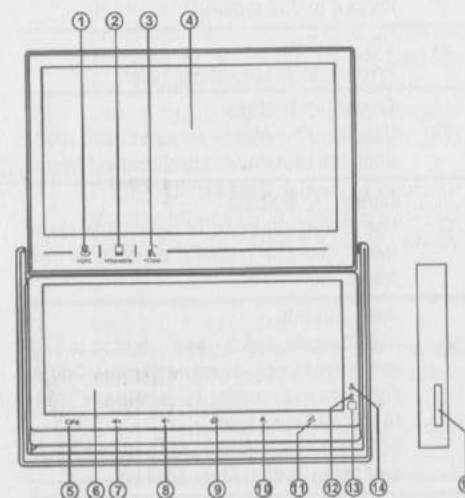

- ① GPS Button
Touch this Button, go to GPS mode

- ② Phone Link Button
Touch this Button, go to Phone Link mode

- ③ Top Panel Close/ Adjustment Button
Condition: Top panel opened
Touch this button: Close top panel
Touch and hold this button for 3 seconds:
Adjust angle of top panel (Angle1 → Angle2 → Angle3 → Angle4)

- ④ Top Panel
Top panel 7" display

- ⑤ Power Button/Mute
Touch this button to turn on or mute the volume output, touch it again to resume volume
Touch and hold this button for 3 seconds to turn off the head unit

- ⑥ Bottom Panel
Bottom Panel 6.95" display

- ⑦ Vol-
Touch this button to decrease volume

- ⑧ Vol+
Press this button to increase volume

- ⑨ Home Button
Touch this button to go back to main menu of bottom panel

- ⑩ Eject Button
Touch this button to eject a disc. If the disc is not removed for about 10 seconds after eject, the disc is reinserted automatically.


- ⑪ Panel Open/ Adjustment Button
Condition: top panel closed.
Touch this button: Open top panel
Touch and hold this button for 3 seconds:
Adjust angle of bottom panel (Angle1 → Angle2 → Angle3 → Angle4 → Angle5 → Angle6)
Condition: Top panel opened
Touch this button: No Function
Touch and hold this button for 3 seconds:
Adjust angle of bottom panel (Angle3 → Angle4 → Angle5 → Angle6)

- ⑫ Reset Button
Press it with a thin, sharp object. The unit will then be reset to factory default settings.

- ⑬ IR Sensor of Remote
IR remote control signal receiving window. Max distance is 6-8 meters, 45 degree angle.

- ⑭ Mic
Build in Microphone for Bluetooth phone calling.


- ⑮ Micro SD Card Slot
Micro SD card slot for GPS map.

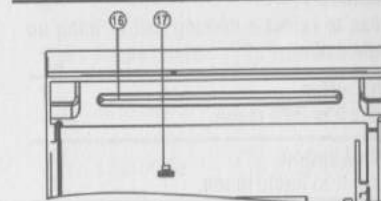

- ⑯ Disc Slot
Insert & Eject disc

- ⑰ Reset Button
Reset the Unit.

Remote Control

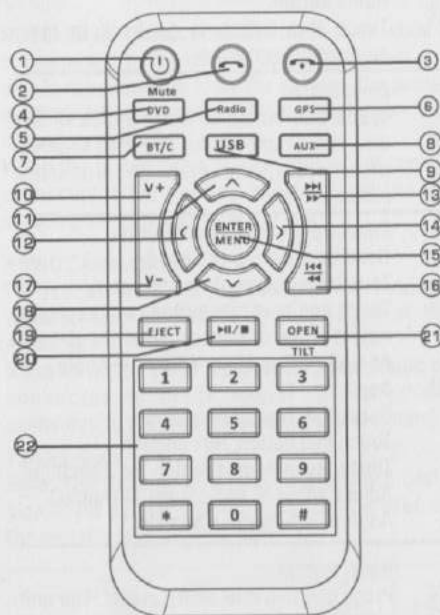

- ① **POWER / MUTE**
Press and hold to power it on or off. Short press this button to mute the volume output, press it again to resume volume.
- ② **DIAL/ ANSWER button (Only for Bluetooth)**
Press to make a call after inputted a phone number or answer an incoming call.
- ③ **REJECT / HANG UP button (Only for Bluetooth)**
Press to reject a coming call or hang up while calling.
- ④ **DVD button**
Press it to DVD mode.
- ⑤ **RADIO button**
Press it to Radio mode.
- ⑥ **GPS button**
Press it to GPS mode. (Only for AVN model)
- ⑦ **BLUETOOTH button**
Press it to Bluetooth mode.
- ⑧ **AUX/AV IN button**
Press it to AUX IN or AV IN mode.

- ⑨ **USB**
Press it to USB mode.
- ⑩ **VOL+ button**
Press to increase volume level.
- ⑪ **Cursor ^ buttons**
Use the ^ buttons to select the menu item, the title track or to show next frame.
- ⑫ **Cursor < buttons**
Use the < buttons to select the menu item, The title tracks it or to show next frame.
- ⑬ **▶▶ / button**
In DVD mode, Press ▶▶ button to skip to the next track, press and hold ▶▶ button for two seconds to activate fast forward (FF) in a track.
In RADIO mode, press ▶▶ to start manual searching button Frequency up.
- ⑭ **Cursor > buttons**
Use the > buttons to select the menu item, the title tracks it or to show next frame.
- ⑮ **MENU/ENTER button**
Press it to confirm selection, Press and hold show main menu..
- ⑯ **◀◀ / button**
In DVD mode, Press ◀◀ button to skip to the previous track. Press and hold ◀◀ button for two seconds to activate fast reverse (REW) in a track.
In RADIO mode, press and hold ◀◀ to start manual searching button Frequency down.
- ⑰ **VOL- button**
Press to decrease volume level.
- ⑱ **Cursor v buttons**
Use the v buttons to select the menu item. The title tracks it or to show next frame.
- ⑲ **EJECT button**
Press it to eject the disc.
- ⑳ **PLAY/PAUSE/STOP button**
In DVD mode, press it to stop playback, press again to resume

Remote Control

OPEN/TILT Button

Press this Button to open and close the TFT monitor. **WARNING:** Do not obstruct the monitor while in the opening or closing cycle, this may cause damage to the monitor mechanism and is NOT covered under warranty.

- ㉑ **Monitor tilt angle:** TILT ANGLE 1 => TILT ANGLE 2 => TILT ANGLE 3 => TILT ANGLE 4.

Digit 0-9 * # buttons

In radio mode, select 1-6 the desired band; In DVD mode, select track. In Bluetooth mode, 0-9 * # enter the phone number or input password.

REMOVE BATTERY

Main Menu

The best way to discover the program is to explore each screen in detail, and to find out how to move from one to another. Read this chapter for a guided tour. Unit starts by displaying the Main menu. This is the root of the screen hierarchy, and you can simply access all features by tapping on the touch screen buttons.
Touch the icons to enter a desired mode.

Bottom Panel




- Note:**
- The distance may vary according to the brightness of ambient light.
 - If the remote is not used for an extended period of time, remove the battery to prevent possible damage from battery leakage and corrosion.
 - Do not place any objects between the remote control unit and the sensor on the unit.
 - Do not drop the remote control onto the floor; it will damage it beyond repair.
 - Do not use the remote control unit, while simultaneously operating the remote control unit of any other equipment; they may interfere resulting in improper operation.
 - Dispose empty batteries in accordance with your local governmental regulations.
 - Do not short-circuit, disassemble, heat or dispose of fire or flames the battery.
 - Keep the battery out of reach of children, should the battery be swallowed, immediately consult a doctor.

- ✓ Touch this key to view the hidden toolbar
- ^ Touch this key to hide the toolbar
- Console Touch this key to go back to main
- Bluetooth Touch this key to enter Bluetooth setting
- Lightbulb Touch this key to adjust the screen brightness
- Gear Touch this key to enter setting menu
- Radio mode Radio mode
- GPS mode Bluetooth Music mode
- USB mode Bluetooth Phone mode
- AV IN mode Phone Link mode
- Back View Camera mode

Main Menu

Bottom Panel

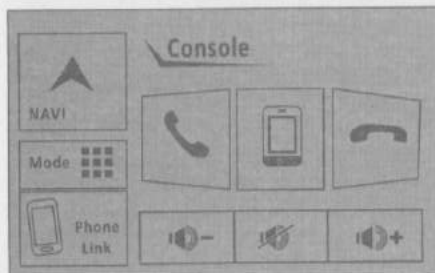

- GPS mode
Touch this key to select a desired mode on bottom panel (Disc → USB → AV IN → BT-Phone → Radio)
- Phone Link mode
Touch this key to answer a call
- Touch this key to end / reject the call
- Touch this key to transfer a call from Bluetooth mode to phone, and vice versa

- Touch this key to decrease volume
- Touch this key to increase volume
- Touch this key to switch the mute setting to on or off

NOTE: The unit can be operated under the following conditions

If top panel is open, operations of GPS mode and Phone Link mode will switch to top panel automatically.

- (1) GPS mode only operates on top panel. Operations on bottom panel remain unchanged.
- (2) Top panel shown either GPS mode or Phone Link mode. Operations on bottom panel remain unchanged.
- (3) In USB mode, it is invalid to enter Phone Link mode, and vice versa.
- (4) Phone Link mode only operates on top panel. Operations on bottom panel remain unchanged. be swallowed, immediately consult a doctor.

Top Panel close condition	Bottom Panel									
	Mode	Radio	Disc	GPS	BT Music	BT Phone	USB	AV IN	R-Camera	Phone Link
		✓	✓	✓	✓	✓	✓	✓	✓	✓

Top Panel Open condition	Bottom Panel									
	Mode	Radio	Disc	GPS	BT Music	BT Phone	USB	AV IN	R-Camera	Phone Link
GPS	✓	✓	✓	✓ (1)	✓	✓	✓	✓	✓	X (2)
Phone Link	✓	✓	✓	X (2)	✓	✓	X (3)	✓	✓	✓ (4)

ICON Operation

- To start Radio, tap Radio icon on main menu screen.



- Return button
- Touch this button can choose FM1, FM2, FM3
- Touch this button can choose AM1, AM2
Touch this button can scan the stations from 1-6, touch and hold it to save the stations with good reception automatically and scan each station for about 5 seconds.
- Touch this button to select program type
- Touch this button to select station backward manually
- Touch this button to select station forward manually
Touch this button to adjust the EQ, it can choose USER → JAZZ → CLASSIC → POP → ROCK → BEAT → FLAT
- Touch this button to search backward stations
- Touch this button to search forward stations
- 1-6 preset selection

Note: When a radio signal is not received, the default for ST / MO function, once received radio function automatically converted to ST

- To start DVD Player, tap DVD button on main menu screen



- Touch it to return to DVD menu
- Touch it to select Subtitle
- Return button
- Touch it to go to previous page or next page of control bar in DVD mode
- Touch it to select previous or next track
Touch it to start fast rewind or fast forward. Press one of the keys again to change the spooling speed (FFx2 → FFx4 → FFx8 → FFx20). Press the PLAY key to regain normal playback
- Pause playback. Press it again to continue playback.
- Touch it to choose Repeat OFF → CHAPTER → TITLE → REP ALL
- Touch it to switch Random on or off.
Touch it to go back to main menu of top panel. Operations on bottom panel remain unchanged. No function when top panel is closed.
- Touch it to adjust the EQ, it can choose USER → JAZZ → CLASSIC → POP → ROCK → BEAT → FLAT
- Touch it to enter DVD ratio setting
- Touch it to adjust the screen brightness (1/4 → 2/4 → 3/4 → 4/4)
- Touch it to select the Audio CH
- Touch it to zoom in/out (OFF → ZOOM 2 → ZOOM 3 → ZOOM 4 → ZOOM 1/2 → ZOOM 1/3 → ZOOM 1/4)

ICON Operation

Note:

1. DVD Player will automatically start playing when you insert any DVD disc.
2. Warning displays if the vehicle is moving for driver's safety.
3. DVD Player will not only play video, but also picture and music files as well.

File Management


DVD mode plays files in a)Disc b)USB c) Memory card



USB INTERFACE OPERATION


To play MP3/ MP4 files from a USB flash memory, insert a USB flash memory into the USB port on the back of the unit and then tap USB button on main menu screen.

When a USB is played, the screen will show following interface. Touch the source key you want to select; the unit will play MP3/ MP4/ JPEG files automatically.

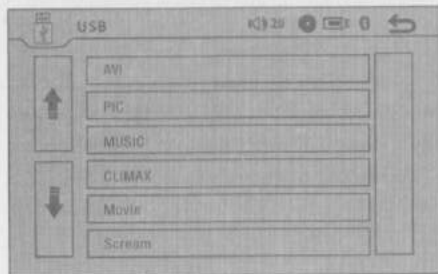


- Touch to view any hidden items
- Return button.

When play the picture, the UI will display as below:

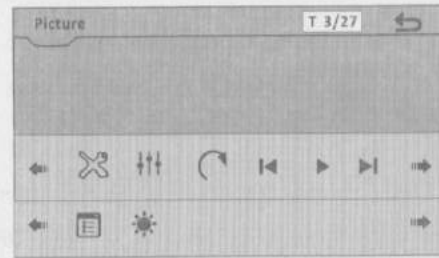

- Touch it to go to previous page or next page of control bar in DVD mode
- Touch it to return to TITLE MENU (you can choose music, picture and video to play)
- Touch it to adjust the EQ, it can choose USER → JAZZ → CLASSIC → POP → ROCK → BEAT → FLAT
- Touch it to rotate the picture
- Touch it to select previous or next track
- Touch it to select play or pause
- Touch it to enter DVD ratio setting
- Touch it to adjust the screen brightness (1/4 → 2/4 → 3/4 → 4/4)
- Touch it to go back to main menu of top panel. Operations on bottom panel remain unchanged. No function when top panel is closed.


When play the music, the UI will display as below:

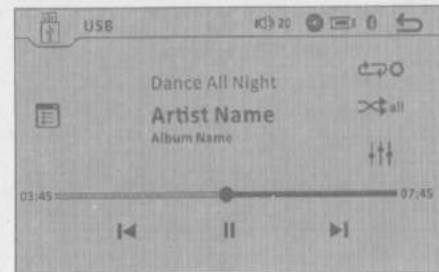

ICON Operation

- Touch it to return to TITLE MENU (you can choose music, picture and video to play)
- Touch it to select previous or next track
- Touch it to select play or pause
- Touch it to select Repeat Off → Repeat 1 → Repeat Folder.
- Touch it switch Random on or off
- Touch it to adjust the EQ, it can choose USER → JAZZ → CLASSIC → POP → ROCK → BEAT → FLAT

When play the video, the UI will display as below:

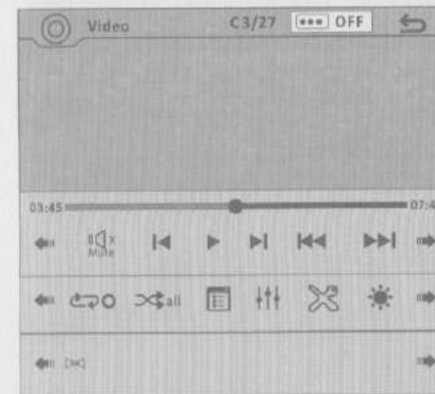

- Touch it to select Subtitle
- Return button.
- Touch it to return to TITLE MENU (you can choose music, picture and video to play)
- Touch it to select previous or next track
- Touch it to start fast rewind or fast forward. Press one of the keys again to change the spooling speed (FFx2 → FFx4 → FFx8 → FFx16). Press the PLAY key to regain normal playback
- Pause playback. Press it again to continue playback.
- Touch it to select Repeat Off → Repeat 1 → Repeat Folder.
- Touch it to switch Random on or off

- Touch it to adjust the EQ, it can choose USER → JAZZ → CLASSIC → POP → ROCK → BEAT → FLAT
- Touch it to enter DVD ratio setting
- Touch it to adjust the screen brightness (1/4 → 2/4 → 3/4 → 4/4)
- Touch it to select the Audio CH


SETTING CONTROL

Your device has default system settings. You can customize the settings to suit your personal needs. Once you change settings, your new settings will remain until you change it again.



To start SETTING, touch ^ key to view the hidden toolbar and then tap SETUP icon to enter setting menu.

Audio Setting

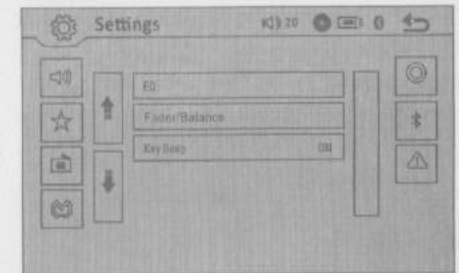



EQ: Press it to choose the EQ (USER → JAZZ → CLASSIC → POP → ROCK → BEAT → FLAT)

Fader/Balance: Press it to adjust the Fader & Balance

Key Beep: Press it to Turn on or Turn off the touch key beep sound

General Setting

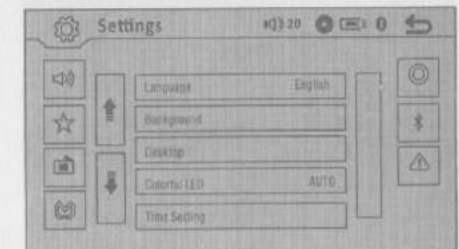

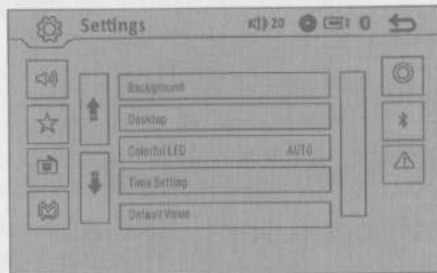

Language: Press it choose English or Español


Background: Press it to choose different background picture

Desktop: Press it to change the desktop design
Background: Press it to choose different background picture

Time Setting : Press it to setting the time, date, time zone


Default Value: Press it to choose the default setting

Radio Setting

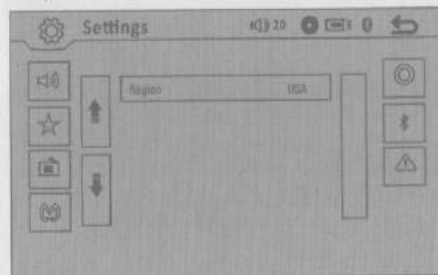

Region: Select the radio region


Display Setting

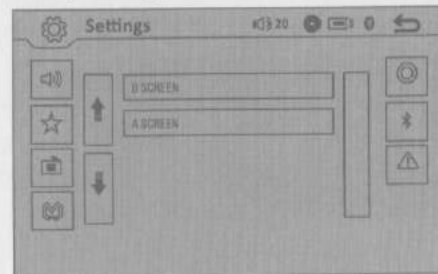

Top Panel: Adjust the color / brightness / contrast / tint display of top panel


Bottom Panel: Adjust the color / brightness / contrast / tint display of top panel

DVD Ratio Setting

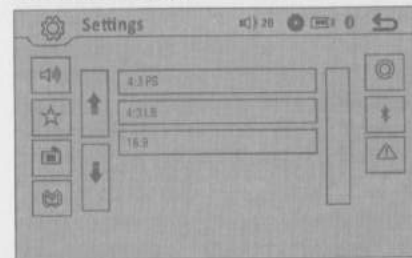

Press it to choose DVD Ratio (4:3 PS / 4:3 LB / 16:9)

Bluetooth Setting

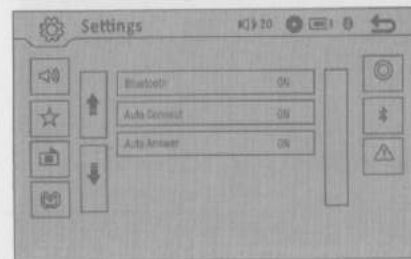

Bluetooth: Turn on or off the Bluetooth

Auto Connect: Turn on or off the Auto connect

Auto Answer: Turn on or off the Auto Answer


System Information




Display the system information

To start GPS mode, please insert SD card in GPS slot on the front panel. Choose Navigation path and touch the Enter icon to enter the GPS (Navigation path choose only for first using). You can choose road and run GPS.


Navigation setup

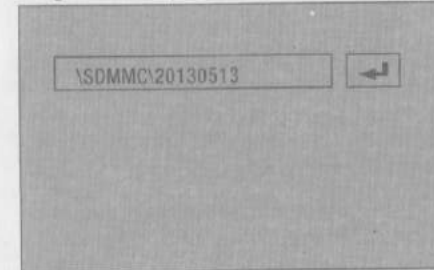

Enter to GPS

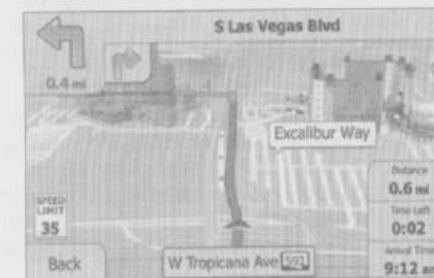

1. Getting started

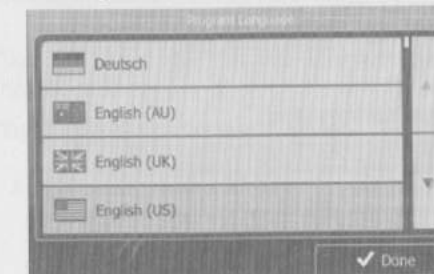

When using the navigation software for the first time, an initial setup process starts automatically. Do as follows:



Select the program language. If your preferred language does not appear on the screen, tap \blacktriangledown or \blacktriangle drag the list up or down with your finger to view all available languages. Tap to select your preferred language. Tap to confirm your selection, and proceed to the next page.

Read the Software and Database End User License Agreement, and tap if you agree with the terms of use.

You are now asked whether you allow the software to collect usage information and GPS logs that may be used for improving the application and the quality and coverage of maps. Tap to allow the anonymous statistics or disable this function.

The Configuration wizard starts. Tap to continue.

Select the voice guidance language profile. If your preferred language does not appear on the screen, scroll the list for other available profiles. Tap any item in the list for a short voice sample. Tap to confirm your selection, and proceed to the next page.

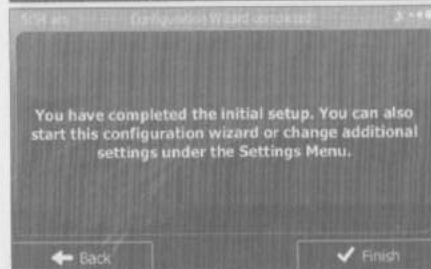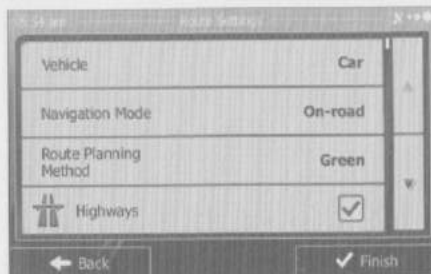



Set your preferred time format and units. Tap **Next** to confirm your preferences.

Set your preferred route planning options. Tap **Next** to confirm your preferences.

The initial setup is now complete. Tap **Finish**. The application starts.

2. Navigation menu

Startup screen: the Navigation menu

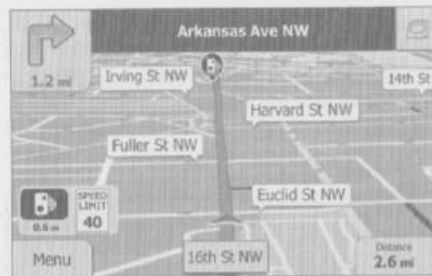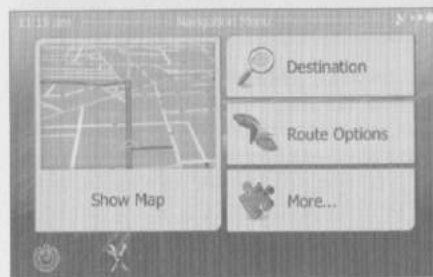

After the initial setup, and whenever the software is started, the Navigation menu appears. You have the following options:

Tap to select your destination by entering an address or selecting a place of interest, a location on the map or one of your Favorite destinations. You can also look up your recent destinations from the Smart History or by entering its coordinate.

Tap to display the route parameters. You can view the route in its full length on the map. You can also perform route-related actions such as editing or canceling your route, setting a start point for the route, picking route alternatives, avoiding parts of the route, simulating navigation or adding the destination to your Favorites.

Tap to simulate demo routes or to run some additional applications.

Tap to customize the way the navigation software works.

Tap to start navigating on the map.

3. Destination menu



In the Navigation menu tap . The Destination menu provides you with the following options:

Tap to specify an address as your destination options:

Tap to select a place of interest as your destination

Tap to navigate to a location selected on the map.



Tap to choose from the list of your favorite destinations.

Tap or to navigate to the recent destination that is shown on the button.

Tap to choose from the list of all recent destinations.

Tap for other search methods.

4. Navigating to an address

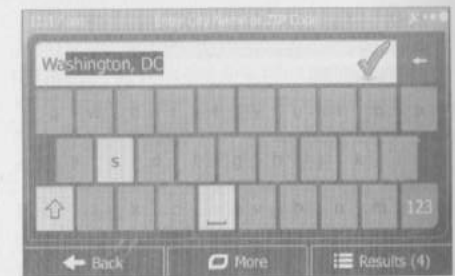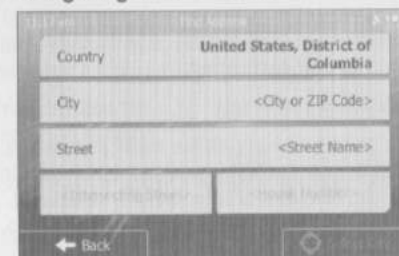

In the Navigation menu, tap then tap . In the US, the screen proposes only the country while in other countries you can see the city or town where you are located

If needed, change the country or the state. Tap the button showing the name of the country.

1. Use the keyboard to enter the name of the country or the state.


2. After entering a couple of characters, the list of countries and states that match the entered string appears. Together with the country, you can select the state, or select the name of the country where it stands without a state to search for an address in all its states.

Outside the United States, the current city/town is displayed. This field is empty when you are in the US. Tap the button and use the keyboard to enter a part of the city/town name. As you enter letters, the most likely city/town name is always shown in the input field. You have the following options:

Tap to select the city/town that is offered in the input field.

Tap to correct your entry.

Tap to browse the list of city/town names matching your input. Select a city/town from the list.

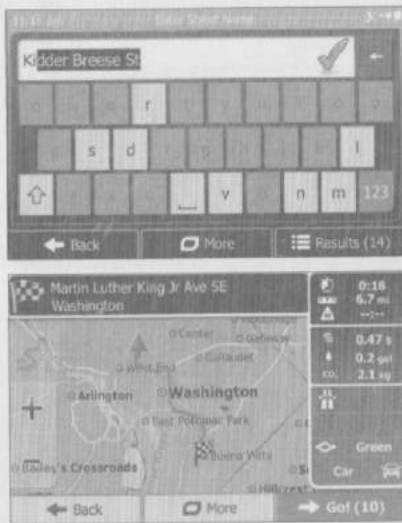**Enter the street name:**

Tap Use the keyboard to enter a part of the street name.

Tap to select the street that is offered in the

input field or tap to browse the list of all streets matching your input. Select a street from the list.

Enter the house number:

Tap Use the keyboard to enter the house number.

Tap to finish entering the address.

The map appears with the selected destination in the middle.

Tap another map location if necessary, then tap to confirm the destination.

After a short summary of the route parameters, the map appears showing the entire route. Wait for a few seconds or tap and start navigating.

5. Quick Find

With the help of Quick Find, you can search for a location near to a known Place of Interest. Search for the Place by its name first and then find your destination on the map. Do as follows (starting from the Navigation menu):

Tap Tap

Start entering the name of the Place of Interest on the virtual keyboard. After entering some letters, tap , and select the Place from the list of matching place names.

Scroll down the list if necessary, highlight the desired Place and tap .


Check the details of the Place, and then tap .

An overview map is displayed with the selected Place in the middle.

Browse the map, and tap the map location that you want as your destination.

Tap .

After a short summary of the route parameters, the map appears with the selected destination in the middle. The route is automatically calculated. The red Cursor appears where you tap the map.

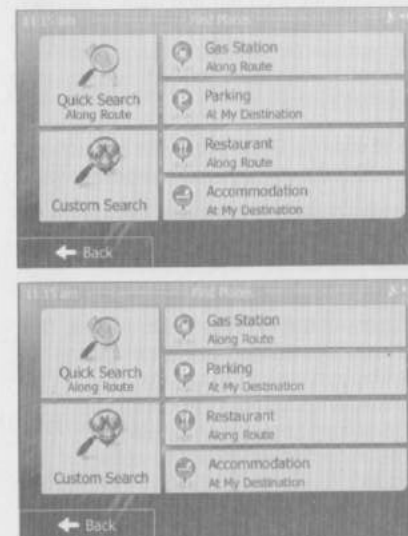6. Navigating to a place of interest

On the Map screen, tap to return to the Navigation menu. In the Navigation menu,

Tap . You are offered the following preset search categories:

Tap to get a list of gas stations along the route or if it is not available, around your current position or your last known position.

Tap to get a list of parking lots near the destination or if it is not available, around your current position or your last known position.

Tap to get a list of restaurants along the route, around your current position or your last known position.

Tap to get a list of accommodations near the destination, around your current position or your last known position.

You can also tap and search for a place by entering its name

If none of the above is appropriate, tap to find a place of interest at the following locations:


Tap to search around the current position or if it is not available, around the last known position

Tap to search for a place within a selected city or town.

Tap to search for a place around the destination of the active route

Tap to search along the active route, and not around a given point.

This is useful when you search for a later stopover that results in a minimal detour only, such as searching for upcoming gas stations or restaurants.

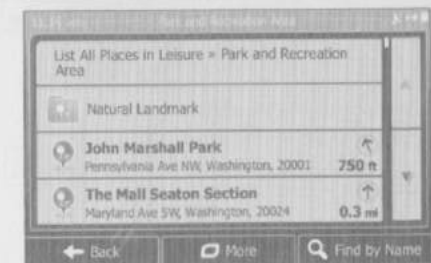7. An example of navigating to a place of interest

Example: To find a park around your destination, do as follows (starting from the Navigation menu):

Tap

Tap


Tap

Tap . The list of place categories appears. Tap or slide your finger to browse the list, and tap . Tap to browse the whole category, or tap to narrow down your arch.

Tap any of the list items. Check the details and the location of the place, and then tap .

After a short summary of the route parameters, the map appears showing the entire route. Wait for a few seconds or tap and start navigating.

8. The Map screen

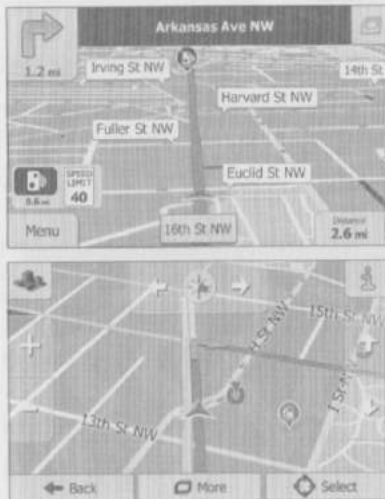

The Map screen is the most important and frequently used screen of the software. The Vehimarker (a blue arrow by default) represents your current position, and the orange line shows the recommended route. There are screen buttons and data fields on the screen to help you navigate. During navigation, the screen shows route information.

At the top of the screen, you see your heading and the house numbers on left and right if you have not selected a route destination. When navigating a route, you see the next maneuver and the next street/road on your route. Tap either of them to open the route itinerary.

Tap to open the Quick menu with a selection of functions that are useful during navigation.

Tap the map anywhere to explore the map around your current position.


Additional map control buttons appear.

Tap to open three data fields on the map. Tap any of them to suppress the others. The default values for navigation (you can change them in Map settings):

- the remaining distance to the destination,
- the remaining time of the trip, and
- the estimated time of the arrival at the destination.

Tap to open the Navigation menu.

9. More menu

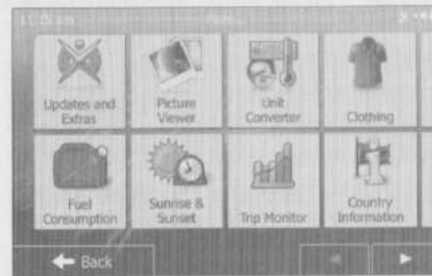


The More menu provides you with various additional applications. In the Navigation menu, tap .

Visit www.naviextras.com to get additional content, such as new maps or 3D landmarks and useful applications.

Access the Picture Viewer.

- Access the clothing size converter
- Access the fuel consumption monitor.
- Access sunrise and sunset times.
- Access your saved trip and track logs.
- Access country information, such as speed limit, maximum blood alcohol level or compulsory equipment.

10. Setting menu

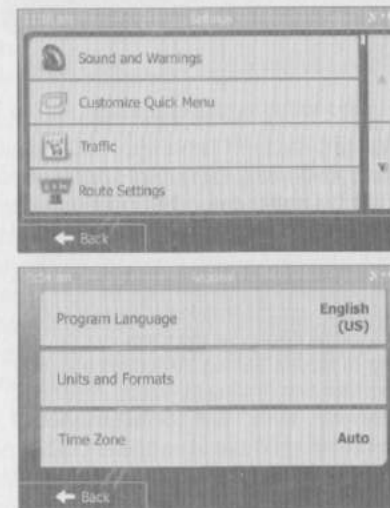

In the Navigation menu, tap . The Settings menu provides you with the following options (scroll the list to see all):

Adjust the different sound volumes, change the voice guidance profile, or enable and set up warnings.

Change the function buttons in the Quick menu of the Map screen.

Select the type of vehicle you are driving, the road types used in route planning, and the route planning method.

If more drivers use PDN-621HBfor navigating, their settings can be remembered by using one of the user profiles.

Adjust map related settings: change the daytime and night color schemes, change the default zoom level, switch between 2D and 3D map, suppress buildings or change the Vehimarker.

Adjust how the software helps you navigate with different kinds of route related information on the Map screen.

Turn the menu animations on or off, select a different skin for the application, or adjust the display backlight.

Change the program language, the time format, units or the time zone.

Turn the automatic trip or track log saving on or off, check the current size of the trip database.

The application collects usage information and GPS logs that may be used for improving the application and the quality and coverage of maps. Here you can enable or disable collecting these logs.

Modify the basic software parameters set during the initial setup process.

Mobile Phone Link Section


Note: Mobile phone link function can only be available:

- Used for Android system phone. Do not support iPhone till now.
- Set your phone's "USB debug mode" is opened.
- Connect the Bluetooth with Head unit.

When start to operate phone link function, firstly set the phone to USB debug mode; connect the USB cable with mobile phone; then confirm your phone has already connected with unit via Bluetooth and then tap Phone Link icon on the main menu enter to Phone link mode.

And you can see below menu, and the unit will automatically connect your mobile phone (MOB), and install a APP into your mobile, after finished

those 2 step, then, unit will be indicated your phone menu in the unit and you can control the phone through the unit.

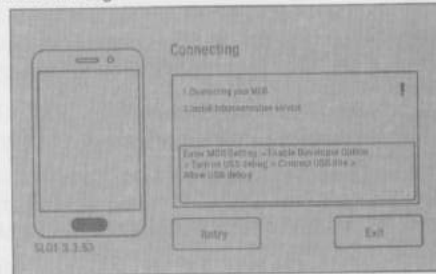


If you want to enjoy your music from all speakers, please enter into the Bluetooth Music mode in bottom panel.

Bluetooth Section

Warning: Driving and having a Telephone conversation at the same time is dangerous, please park your car before having a telephone conversation. The supplier waves any and all liability when this warning is not followed.

To enter Bluetooth mode, you can tap BT-Phone icon on Main menu or long press the mute/Bluetooth button on the Remote Control or press mode button on remote or on front panel.

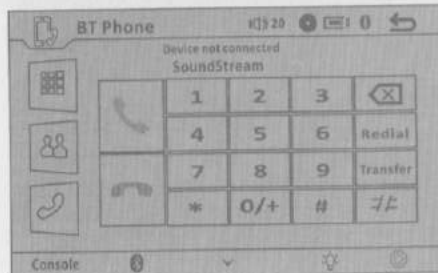

- Tap Dial button to enter call mode.
- Tap this button can see phonebook.
- Tap this button can see missed, received and dialed calls.

- Tap this button Making and accept calling.
- Tap this button to hang up the call.

Pairing Mode

At the first time when using BLUETOOTH, you need to pair the mobile phone first. When a phone has not been paired with the unit, the BT icon and pairing mark will blink continually on the panel.

When the unit have connect with phone, the BT icon will turn on and the Mobile phone name (if available) will be display on the panel.

According to mobile pairing device manual, after searching new device (SoundStream), select it, input password "0000" and confirm ok, device pairing is finished.

The text 'Enter Number' will shows on the panel after the pairing is completed. It means device is connected and ready for BLUETOOTH communication.

Auto-connect - Disconnect

When power on the unit, the last paired phone will be connected to the device via Bluetooth automatically, after searching about one minute, if the device cannot find the paired phone, it will stop searching. When in standby mode (unconnected), long press Bluetooth button on remote control to active auto-connect function and the device will search the last paired phone.

Bluetooth Section

If you want to disconnect the Bluetooth connection, turn off the Bluetooth on the phone.

1. DIAL BUTTON

Tap on Dial button to enter call mode.

In Call mode, the unit can be used as your phone. Making and receiving calls are possible with BLUETOOTH. Simply tap phone number and tap button to make a call,

and tap button to hang up.

1.) Tap button shortly to delete a wrong digit, or press Reject/INT button on remote to delete all the numbers at once.

2.) Tap button, the device automatically

makes a call to the latest call in its call log.

NOTE: the phonebook only supports Western Characters. Any difference in character will be shown such as "+, * or #"

2. Bluetooth Phone Book

The unit can download the data from phone automatically when the pairing between a phone and the unit be completed.


The unit displays the data which have been downloading from a phone. Select a number and tap SEND button to make a calling. Press the PB-DOWN button, phonebook will be updated and downloaded with new phonebook.

3. Calling History

Tap HISTORY button to see history mode. The unit can download automatically all the data from the mobile phone.

Dialed / Recived / Missed calls are saved in history mode. Tap up/down arrow load previous / next history record.

4. Bluetooth- Music

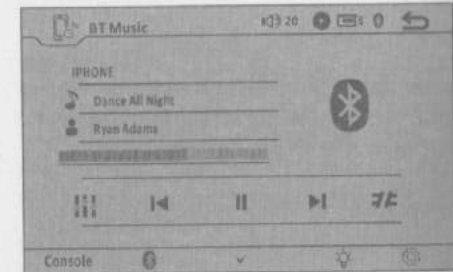

You can select the function with the key for previous, play or pause, stop and next.

A2DP (Advanced Audio Distribution Profile) Music Player

A2DP is a function which can receive the audio frequency signal from the mobile phone, amplified by the car audio and played out by the car speakers.


Notice: your mobile phone need to support A2DP.

Tap the buttons on the screen as shown, or press corresponding buttons (PAUSE/PLAY, STOP, PREVIOUS/NEXT) on remote control to play, pause, play previous, or next music file.

Other Mode

To start AV-IN Mode, tap on AV IN button from main menu screen.

Connect the external audio/video signal source to this unit. Select AV-IN mode in the main menu and. TFT display as below:

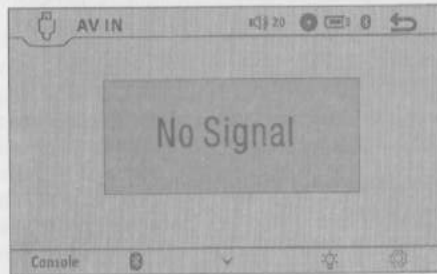

To start Back View Camera mode, tap on R-Camera button from main menu screen.

This unit is equipped with back view camera output. The camera is used to observe the situation behind the vehicle when you are backing the car.

Please connect your back view camera with the back car video input. And connect the reverse wire for back a car with the rear gear light. Rear view camera picture will be enabled when you are backing the car.

Note: If the Rear view camera is not connected, the TFT displays as below.



Other Functions

Independent Volume Adjustment



You can choose the "GPS & Phone VOL" or "MEDIA VOL" to adjust the volume from top panel or bottom panel independently.

Condition 1: Top panel is opened:

Top panel: GPS / Phone Link mode

Bottom panel: Radio / Disc / BT-Music / BT Music / USB / AV IN mode

Touch "Vol-" or "Vol+" and select "GPS & Phone VOL", then press and hold "-" or "+" to adjust the volume from top panel

Touch "Vol-" or "Vol+" and select "MEDIA

VOL", then press and hold "-" or "+" to adjust the volume from bottom panel

Parking

When the car is stopped and the parking brake is working, the screen can display the video image, otherwise the screen can't display the video image


Notes On Disc

- Only use groundless loudspeakers.
- Use only loudspeakers of minimal 40Watt, using fewer watts may result in damaging your loud speakers at higher volumes.
- Use 4~8 Ω (Ohm impedance) loudspeakers only; using higher or lesser impedance may damage the unit.
- Do not use 3-cable loudspeakers and do not connect the loudspeakers minus to the car body. (GND).
- Using a BTL circuit and each loudspeaker must be connected with insulated cables according to the diagram.
- Loudspeaker cables and/or optional external power amplifiers must always be about 30cm. away from the antenna and/or antenna extension parts.
- If want to display for 7" TFT, parking wire must be connected to ground.

Handling discs.

Handling

when holding with both hands

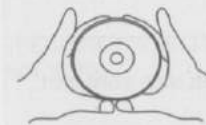

when holding with one hand



- Do not use damaged (cracked or warped) discs.
- Do not scratch the signal surface or let it get dirty.
- Do not attach paper or seats to discs. The player may be damaged if there is any exposed glue, etc., on discs.
- For rental discs in particular, extra labels are often attached to the discs.
- Check carefully for any exposed glue before using such discs.



Storing discs

Always place discs in their case and store them vertically.

Avoid storing discs in hot or humid places, places exposed to direct sunlight and places in which temperature is extremely low.

Read and cautions included with the discs carefully.

Cleaning discs

Fingerprints of dust on discs may reduce sound or picture quality. Remove them by gently wiping the disc from the center toward the edges using a soft cloth.



- Do not use benzene, thinner or other volatile chemicals.
- Do not use record spray or antistatic spray either.
- We recommend using the separately sold cleaning set to clean discs.
- For touch dirt, apply some water to a soft cloth, wring out thoroughly wipe off the dirt, then wipe the disc with a dry cloth.

Irregular shaped discs

Irregular shaped discs (heart-shaped discs, hexagonal discs, etc.) Can not be played on this player. Doing so could damage the player. Never use such discs.



Troubleshooting

	Symptom	Cause	Remedy
General	General Power does not turn on. (No sound is produced.)	Fuse is blown	Replace with fuse of the same amperage. If the fuse blows again, consult your store of purchase
		In correct wiring	Consult your local retailer.
	No sound output when operating the unit with amplifiers or power antenna attached.	Power antenna lead is shorted to ground excessive current is required or remote on the amplifiers or power antenna.	<ol style="list-style-type: none"> 1. Turn off the unit. 2. Remove all wires attached to the power antenna lead. Check each wire for a possible short to ground using an ohm meter. 3. Turn on the unit. 4. Reconnect each amplifier remote wire to the power antenna lead one by one. If the amplifiers turn off before all wires are attached, use an external replay to provide remote-on voltage (excessive current required).
Nothing happens when buttons are pressed. Display is not Accurate.	The microprocessor has malfunctioned due to noise, etc.	Turn off the power, Then press the [no open] button and remove the DCP. Press the reset button for about 2 seconds with a thin rod.	
	Panel or main unit Connectors are dirty	Wipe the dirt off with a soft cloth moistened with cleaning alcohol.	
CD	Sound is bad directly after power is turned on.	Compact disc is dirty	Clean the compact disc without scratches
		Compact disc is heavily scratched or warped	Replace with a compact disc without scratches.
	Sound is bad directly after power is turned on.	Water droplets may form on the internal lens when the car is parked in a humid place	Let it dry for about 1 hour with the power on.

Troubleshooting

Symptom	Cause	Remedy
NO POWER	THE CAR IGNITION IS NOT ON.	IF THE POWER SUPPLY IS PROPERLY CONNECTED TO THE CAR ACCESSORY SWITCH THE IGNITION KEY TO "ACC".
	THE FUSE IS BLOWN.	REPLACE THE FUSE.
DISC CANNOT BE LOADED.	PRESENCE OF DISC INSIDE THE PLAYER	REMOVE THE DISC IN THE PLAYER THEN PUT A NEW UPWARD.
DISC CANNOT BE READ.	INSERTING THE DISC IN UPSIDE DOWN.	INSERT THE COMPACT DISC WITH THE LABEL FACING UPWARD.
	COMPACT DISC IS EXTREMELY DIRTY OR DEFECTIVE.	CLEAN THE DISC OR TRY TO PLAY A NEW ONE.
	TEMPERATURE INSIDE THE CAR IS TOO HIGH.	COOL OFF UNTIL THE AMBIENT TEMPERATURE RETURNS TONORMAL.
NO SOUND	VOLUME IS IN MINIMUM	ADJUST VOLUME TO A DESIRED LEVEL.
	WIRING IS NOT PROPERLY CONNECTED.	CHECK WIRING CONNECTION.
THE OPERATION KEYS DO NOT WORK.	THE BUILT-IN MICROCOMPUTER IS NOT FRONT PANEL IS NOT PROPERLY FIX INTO ITS PLACE.	PRESS THE POWER BUTTON FOR ABOUT 10 SECONDS TO RESET THE UNIT.
SOUND SKIPS.	THE INSTALLATION ANGLE IS MORE THAN 30 DEGREES. NOT OPERATING PROPERLY DUE TO NOISE.	ADJUST THE INSTALLATION ANGLE TO LESS THAN 30 DEGREES.
	THE DISC IS EXTREMELY DIRTY OR DEFECTIVE.	CLEAN THE COMPACT DISC/TRY TO PLAY A NEW ONE.
THE RADIO DOES NOT WORK, THE RADIO STATION AUTOMATIC SELECTION DOES NOT WORK.	THE ANTENNA CABLE IS NOT CONNECTED THE SIGNALS ARE TOO WEAK.	INSERT THE ANTENNA CABLE FIRMLY SELECT A STATION MANUALLY.

Technical Specifications

General

Power supply:	11~16V DC
Current consumption:	max. 10 A
Maximum power output:	4 x 50W channels (max)
Compatible formats:	DVD/VCD//MP3/MP4/VIDEO/CDDA/PICTURE CDCD-R/-RW/DVD±R/±RW PLAYBACK
Dimensions (W x D x H) / weight:	178*170*100 mm/1.5 kg
Working temperature range:	Working temperature range:
ESP function:	10 sec. for Audio CD, 120 sec. for MP3

TFT display

Screen size:	6.2 inch
Resolution:	800*480 pixel
Aspect ratio:	4:3/16:9
Brightness:	460 cd/m ²
Contrast ratio:	500:1

FM Stereo Radio

Frequency range(Europe Area):	87.5 - 108MHz(Step 50KHz)
Frequency range(U.S.A Area):	87.5 - 107.9MHz(Step 200KHz)
Frequency range(South America Area):	87.5 - 107.9MHz(Step 100KHz)
Frequency range(Russian Area):	87.5 - 108MHz(Step 50KHz) 65-74MHz(Step 30KHz)
Frequency range(Asia Area):	87.5 - 108MHz(Step 100KHz)
Preset memory stations:	18

AM/MW Radio

Frequency range(Europe Area):	522kHz - 1620 KHz(Step 9KHz)
Frequency range(U.S.A Area):	530kHz - 1710 KHz(Step 10KHz)
Frequency range(South America Area):	530kHz - 1710 KHz(Step 10KHz)
Frequency range(Russian Area):	522kHz - 1620 KHz(Step 9KHz)
Frequency range(Asia Area):	531kHz - 1602 KHz(Step 10KHz)
Preset memory stations:	12

Audio specification


Frequency response:	20 Hz-20 KHz
USB interface	
USB type	USB 2.0 full speed
Support format	mp3 , wma, mpeg1, mpeg2, avi


Specifications are subject to change without notice. Mass and dimension are approximate.

Bluetooth Connection Attention Instructions

!!ATTENTION INSTALLER!!

Bluetooth Connection Instructions

1. To enter Bluetooth mode, you can tap Bluetooth icon  on Main menu or long press the "mute"/"Bluetooth" button on the Remote Control, or press "mode" button on remote or on front panel to select bluetooth mode.

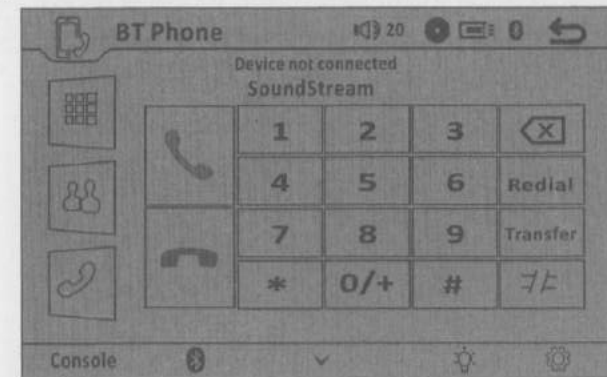


2. At the 1st time when using BLUETOOTH, you need to pair the mobile phone first.
3. Place your Bluetooth Enabled cell phone in pairing mode.
4. Connect your phone to the radio, using the pass code 0000


Video File Conversion 101

File compression seems to be name of the game to see who can fit the most music and video onto today media deices. Unfortunately with so many compression formats and codecs, it becomes virtually impossible for your head unit to support the multitude of song and video file types. To overcome the confusion of what video formats are compatible with this head unit, we suggest using a file converter to align the stars and change the many video file types you have to one standard.


Surely there are many file conversion apps available on the line, but CNet seems to be a reliable source and has a good file conversion app available. Check out: <http://download.cnet.com/Free-AVI-Video-Converter/3000-2194-4-75685273.html>
Drop by our website for the link instead of typing a million letters and symbols into your web browser?

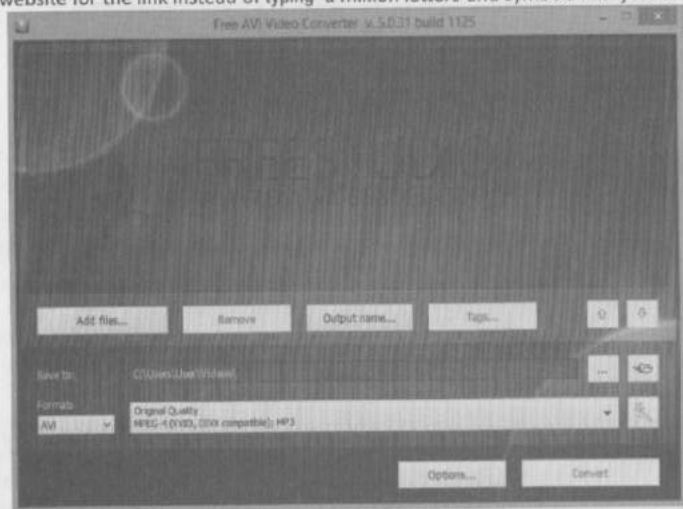

After the app downloads and installs, it's pretty simple to convert your files. Select the Add File button and browse your computer to find the alien file type you need to convert. The file info should appear at the top:

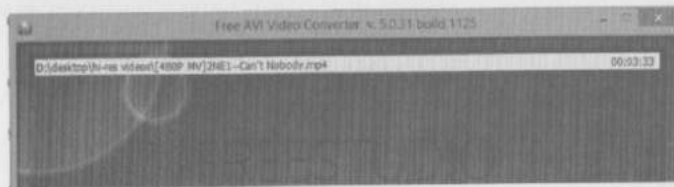


 There are some optional choices after the file is selected, like changing the name to protect the innocent, or change the location the converted file is saved. If you feeling frisky go for it:




Video File Conversion 101

Otherwise, choose the file format you want to convert your movie to. May we recommend the AVI:

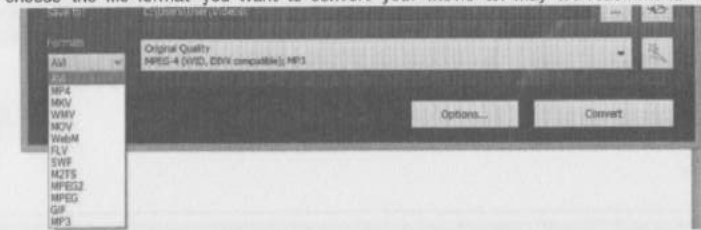

You can also choose the resolution for the screen size and type. If you're converting an original file that is super high quality resolution, you might consider the HD options, but most commonly you should choose Normal Quality or Original Quality.

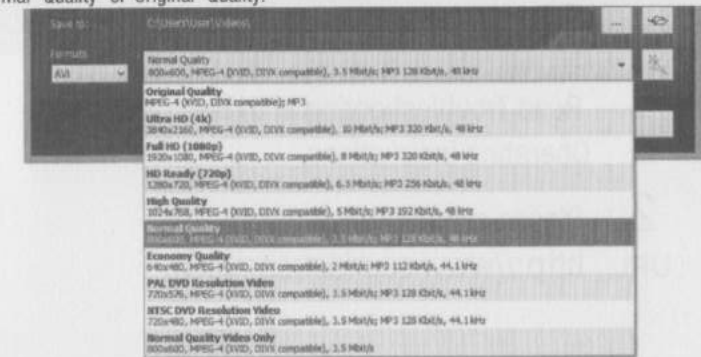

There are some fantastic options to change the standard codec, bit & frame rates, blood types, and so on, but we suggest keeping everything preset as the app recommends. Its these crazy variables that brought you here in the first place.



Finally, click convert and wait for the bell:

